
AR82.10-P-5375RT	Remove/install center high-mounted stop lamp
7	

MODEL 251

1 Plug 2 Clamps 3 Bolts

E21 Center high-mounted stop lamp

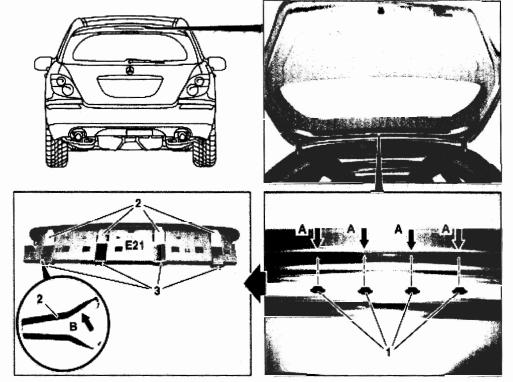

P82.10-4348-06

2.11.05

Z	Removing	
1	Open tailgate	
2	Remove stop plug (1)	Avoid damaging paint!
3	Remove bolts (3)	Avoid damaging paint!
		Screw bolts (3) in through the holes

		(arrow A). Do not drop the bolts (3) in the rear-end door.
4	Pull off clamps (2)	Do not drop in the rear-end door.
5	Close rear-end door	
6	Pull center high-mounted stop lamp (E21) far enough out until the electrical connector is visible	Avoid damaging paint!
7	Detach electrical connector from center high-mounted stop lamp (E21)	
X	Install	
8.1	Fit clips (2) into center high-mounted stop lamp (E21)	i Only if the center high-mounted stop lamp (E21) is used again.
		Ensure that the clips (2) are correctly seated. Install longer end (arrow B) of the clips (2) upwards.
9.1	Screw in screws (3)	i Only if the center high-mounted stop lamp (E21) is used again.
10	Connect electrical connector	
11	Insert center high-mounted stop lamp (E21)	The center high-mounted stop lamp (E21) must latch audibly into place.

		(arrow A). Do not drop the bolts (3) in the rear-end door.
4	Pull off clamps (2)	i Do not drop in the rear-end door.
5	Close rear-end door	
6	Pull center high-mounted stop lamp (E21) far enough out until the electrical connector is visible	i Avoid damaging paint!
7	Detach electrical connector from center high-mounted stop lamp (E21)	
K	Install	
8.1	Fit clips (2) into center high-mounted stop lamp (E21)	i Only if the center high-mounted stop lamp (E21) is used again.
		Ensure that the clips (2) are correctly seated. Install longer end (arrow B) of the clips (2) upwards.
9.1	Screw in screws (3)	i Only if the center high-mounted stop lamp (E21) is used again.
10	Connect electrical connector	
11	Insert center high-mounted stop lamp (E21)	The center high-mounted stop lamp (E21) must latch audibly into place.