

MODEL 251

- Upper B-pillar paneling
- 2 Paneling of bottom of B-pillar
- 3 Cover
- Bolt
- 4 5 6 Air outlet
- Catches
- Bracket
- Guide

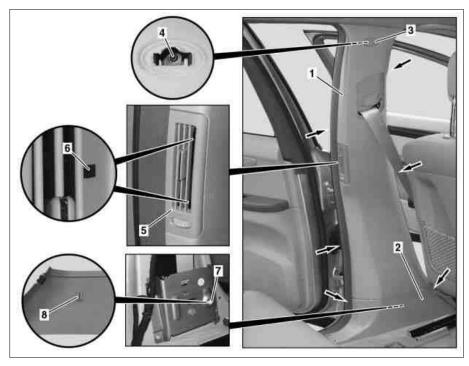

P68.30-3119-06

- Upper B-pillar paneling
- 9 Seat belt height adjustment paneling
- 10 Upper guide
- Lower guide 11
- Seat belt height adjustment mechanism 12

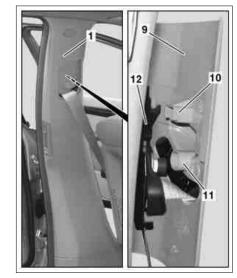

P68.30-3120-02

13 Paneling Seat belt end fitting 14 Bolt 15 16 Arresting lug


P68.30-3121-10

| XX | Remove/Install | | |
|----|---|---|------------------|
| 1 | Move front seat forward | i See Operator's Manual | |
| 2 | | Let of right side. | AR68.30-P-4100RT |
| 3 | Remove edge guard in area of B-pillar on rear | i Installation: Ensure that edge guard is | |
| | | seated correctly. | |

| 4 | Remove air outlet (5) with suitable tool | Removal: The air outlet is fastened with 4 catches (6). Pull catches (6) toward inside with suitable tool and remove air outlet | |
|----|---|---|---------------------|
| 5 | Unclip cover (3) | | |
| 6 | Unscrew bolt (4) | | |
| 7 | Remove paneling (13) from front seat | | |
| 8 | Unscrew bolt (15) from belt end fitting (14) and remove belt end fitting (14) | installation: Ensure that seat belt does not twist and that the arresting lug (16) is seated correctly in the guide. | *BA91.40-P-1001-01N |
| 9 | Remove edge guard in area of B-pillar from front door | i Installation: Ensure that edge guard is seated correctly. | |
| 10 | Unclip upper B-pillar paneling (1) | i Install seat belt through belt height adjustment paneling (9) i Removal: Position mounting wedge directly to clips (arrows) i Installation: Ensure that upper guide (10), lower guide (11) and belt height adjustment paneling (9) are seated correctly on belt height adjustment (12). | *110589035900 |
| 11 | Unclip lower B-pillar paneling (2) | Mounting wedge i Installation: Position mounting wedge directly to clips (arrows) | 1100090000 |
| | | i Installation: Slide guide (8) on lower B-pillar paneling (2) into mount (7). Mounting wedge | *110589035900 |
| 12 | Install in the reverse order | | |

$\overline{\rm Nm}$ Seat belts/emergency tensioning retractors

| Number | Designation | | Model 251 |
|--------------------|---------------------------|----|-----------|
| | | | |
| | | | |
| BA91.40-P-1001-01N | Screw at belt end fitting | Nm | 35 |
| | | | |

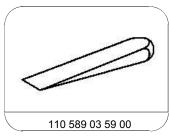

Mounting wedge