

AR60.00-P-0700-01LC	Gap dimensions on hoods, doors and lids		
---------------------	---	--	--

Model 217

Modification notes

13.08.2015	Motorhaube zu Kotflügel	Typ 217.3	BE60.00-P-1003-01DA
13.08.2015	Vordertür zu Kotflügel	Typ 217.3	BE60.00-P-1004-01DA
27.04.2016	Soft top to soft top compartment lid	Model 217.4	BE60.00-P-1022-01DA

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1002-01DA	Engine hood to fender	Dimension "F3/F3A" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1003-01DA	Engine hood to fender	Dimension "F3B" mm	4,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1004-01DA	Front door to fender	Dimension "F4" mm	4,0 (± 1,0)	3,0 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1005-01DA	Front door to sidewall	Dimension "F6" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1006-01DA	Longitudinal member panel to front door	Dimension "F7" mm	5,0 (± 1,0)	5,0 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1007-01DA	Trunk lid to rear fender	Dimension "F8/F8B" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1008-01DA	Rear fender to taillamp	Dimension "F9C" mm	1,0 (± 0,5)	1,0 (± 0,5)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1009-01DA	Trunk lid to bumper	Dimension "F10" mm	5,0 (+1,0/-0,5)	5,0 (+1,0/-0,5)

		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC
--	--	------------------	-------------------------	-------------------------

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1010-01DA	Trunk lid to bumper	Dimension "F10A" mm	3,5 (+1,5/-1,0)	3,5 (+1,5/-1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1011-01DA	Fuel filler flap	Dimension "F11" mm	2,0 (± 0,5)	2,0 (± 0,5)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1012-01DA	Protrusion - bumper/engine hood	Dimension "F20A" mm	1,0 (± 1,0)	1,0 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1013-01DA	Engine hood to bumper	Dimension "F20A/ F20C" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1014-01DA	Bumper to headlamp	Dimension "F26A/ F26B" mm	2,5 (-1,5/+1,0)	2,5 (-1,5/+1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1015-01DA	Cover for longitudinal member to rear fender	Dimension "F36A" mm	4,0 (± 1,0)	4,0 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1016-01DA	Front door window to rear side window	Dimension "F57" mm	7,5 (± 1,0)	8,0 (± 0,5)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1017-01DA	Taillamp to bumper	Dimension "F162A" mm	1,5 (± 1,0)	1,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1018-01DA	Outside of taillamp to inside of taillamp	Dimension "F164" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1019-01DA	Taillamp to trunk lid	Dimension "F167B" mm	1,5 (± 1,0)	1,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1020-01DA	Soft top compartment lid to rear fender	Dimension "F137a" mm	-	3,5 (± 1,0)
		For picture, see	-	AR60.00-P-0700-01 LC

Check values for gap dimensions


Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1021-01DA	Soft top compartment lid to trunk lid	Dimension "F177" mm	-	5,0 (+1,0/-0,5)
		For picture, see	-	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1022-01DA	Soft top to soft top compartment lid	Dimension "F138" mm	-	4,0 (± 1,5)
		For picture, see	-	AR60.00-P-0700-01 LC


Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1023-01DA	Soft top to windshield frame	Dimension "F133a" mm	-	11,0 (± 1,5)
		For picture, see	-	AR60.00-P-0700-01 LC

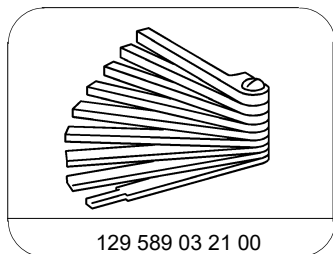

129 589 03 21 00

Feeler gauge

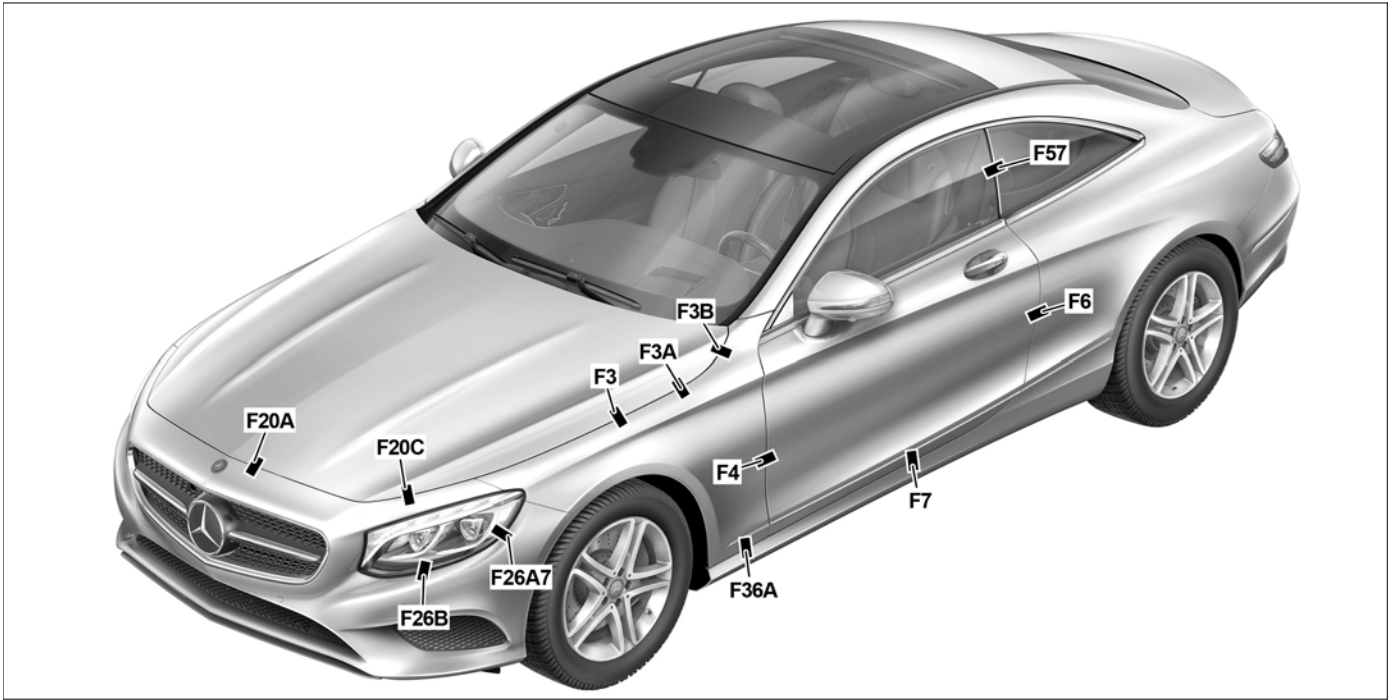


P60.00-3043-09

Shown on MODEL 217.3




P60.00-3042-09


Shown on model 217.3

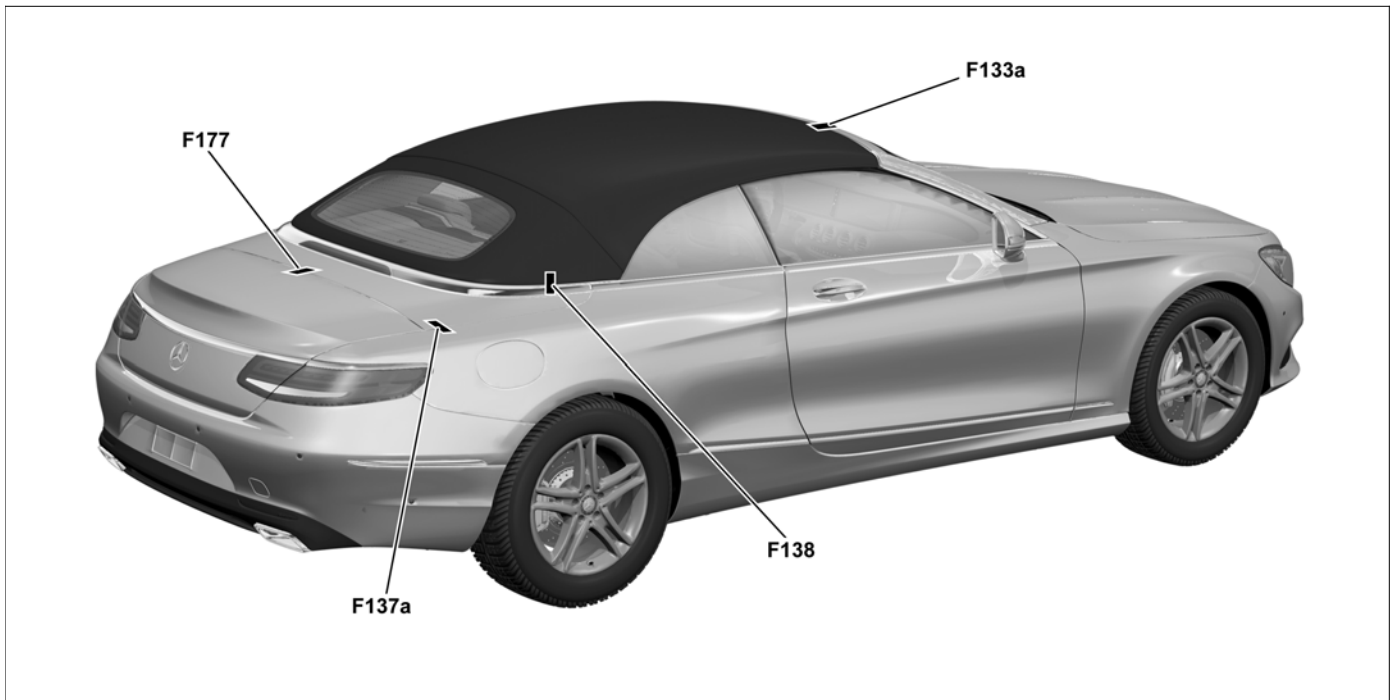

P60.00-3100-09

Shown on model 217.4

- 1 Check gap dimensions on hood, doors and cover with  feeler gauge according to drawing

 Adjust hoods, doors and lids as shown in drawing. The gap should not run wedge-shaped or be too narrow at points. Deviations from parallel gap should be max. 1 mm over the entire length. If the inside clearance is too large or too small, the movable body parts must be centered accordingly. The reference measurements apply only for repair work on vehicles damaged in accidents.