
MODEL 220 except CODE (Z07) Top protection except CODE (Z04) Light armoring

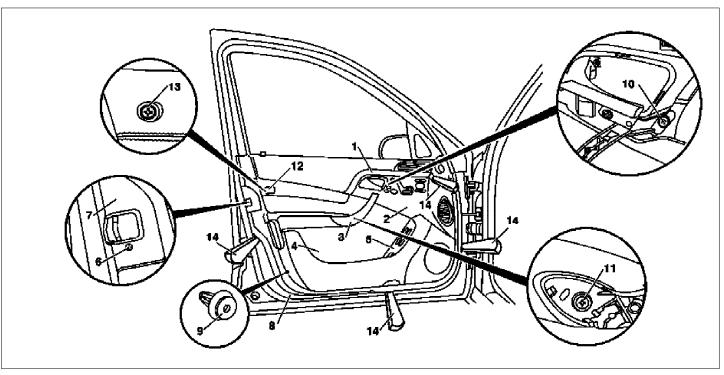

P72.10-0579-09


Shown on model 220 up to VIN: 316716


- 1 Trim strip
- 2 Covering
- 3 Door handle cover
- 4 Door lining

- Cover on switch group
- 6 Screw
- 7 Lock rosette
- 8 Inner door panel

- 9 Fastening clips
- 10 Screw
- 11 Screw
- 12 Cover
- 13 Screw



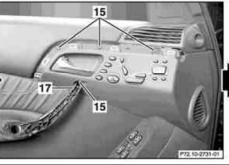

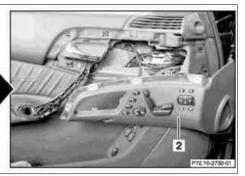


P72.10-2733-07

Shown on model 220 up to VIN: 316716

1 Trim strip

- 2 Covering
- 3 Door handle cover

- 15 Bolts
- 17 Cap

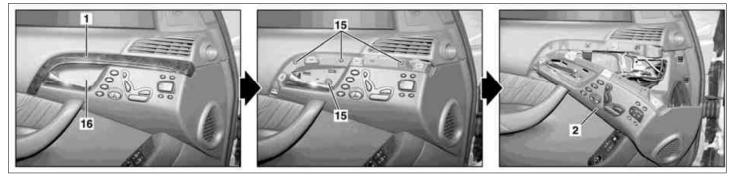

P72.10-2729-07

Shown on model 220 As of VIN: 316717


Trim strip 2 Covering

Shown on model 220 up to VIN: 316716

2 Covering


N69/1 Left front door control unit N69/2 Right front door control unit

- 15 Bolts
- 16 Door opener cover

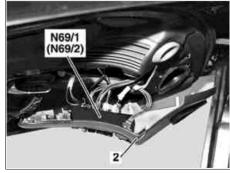

P72.10-0581-01

| XX | Remove/Install | | |
|-----|---|---|---------------|
| 1 | Press trim strip (1) out of covering (2) | 3 | *110589035900 |
| 2.1 | Remove door handle cover (3) from door handle | Up to VIN :316716 | |
| 2.2 | Remove door opener cover (16) | As of VIN: 316717 | |
| 3.1 | Unclip cap (17) | Up to VIN :316716 | |
| 4 | Remove screws (15) | | |
| 5 | Press covering (2) off of door lining (2) | 3 | *110589035900 |
| 6 | Disconnect electrical connector from left front door control unit (N69/1) and right front door control unit (N69/2) | i For this purpose, remove covering (2) | |
| 7 | Unclip cover on switch group (5) with switch group from door lining (4) | i For this purpose, pull cover on switch group (5) downward at bottom edge until cover on switch group (5) can be removed | |
| 8 | Unscrew bolt (6) from round cover plate (7) | i For this purpose, remove round cover plate (7) | |
| 9 | Unscrew bolts (10, 11) from inner door handle | | |
| 10 | Remove screw (13) | i For this purpose, remove cover (12) | |
| 11 | Press door lining (4) off of inner door panel (8) | i Move mounting wedge (14) directly to fastening clips (9) and ensure that the retainer tabs on the fastening clip (9) do not tear out of the door lining (4) | *110589035900 |
| 12 | Lift door lining (4) at top on sealing rail out of retaining clips and simultaneously pull away from inner door panel (8) | i Installation: Remove fastening clips remaining on inner door panel (8) and install at corresponding point on door lining (4) | *110589035900 |
| 13 | Unhook Bowden cable from inside door opener | | |
| 14 | Disconnect electrical connectors from door lining (4) and lay down door lining (4) | | |
| 15 | Check door foil and fastening clips (9) | i Installation: Replace damaged door foil and fastening clips (9) | |
| 16 | Install in the reverse order | | |

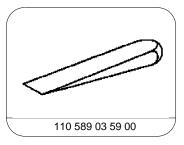

Mounting wedge