## MODEL 220

## Left figure: Driver's side

Mounting screws
Air vent

3 Molding grille4 Insert clips

## Right figure: Passenger side


1 Mounting screws

2 Air vent3 Molding grille4 Insert clips


5 Instrument panel

6 Molding 7 Side air vents for front doors Arrows Location of mounting nuts for

molding

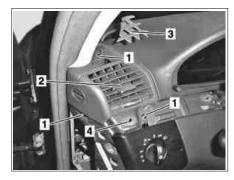

P68.10-2013-01

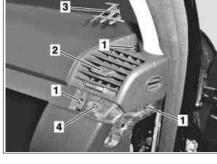


P68.10-2012-01



P68.10-2015-01

P68.10-2014-01

XX	Removal, installation		
	Driver's side		
1	Pry molding (6) out of insert clips (4) on instrument panel (5) in area of left air vent (2) with long wedge	(3) Do not remove molding	***************************************
		3	*115589035900
2	Remove molding grille (3) for left air vent (2) upward		
3	Pry side air vent (7) for left front door out of instrument panel (5) with long wedge	3	*115589035900
4	Remove paneling on A-pillar		AR68.30-P-4050M
5	Unscrew screws (1)		
6	Remove air vent (2) from air duct		
7	Disconnect connector for air vent (2) illumination	illumination cannot be replaced or repaired	
	Passenger side		
8	Remove glove compartment		AR68.10-P-1400M
9	Unscrew mounting nuts for molding (6) in area of glove compartment (arrows)	i Molding (6) is screwed onto instrument panel (5) from rear in area of glove compartment	
10	Pry molding (6) out of insert clip (4) on instrument panel (5) in area of right air vent (2) with long wedge	[3]	*115589035900
11	Remove molding grille (3) for right air vent (2) upward		
12	Pry side air vent (7) for right front door out of instrument panel (5) with long wedge	3	*115589035900
13	Remove paneling on A-pillar		AR68.30-P-4050M
14	Unscrew screws (1)		
15	Remove air vent (2) from air duct		
16	Disconnect connector for air vent (2) illumination	i Illumination cannot be replaced or repaired	
17	Install in opposite order		

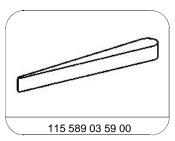

Long wedge