
MODEL 220

- Front cover
- 2 3 Tabs Knee protection
- **Bolts**
- Hook
- 4 5 6 Heater housing

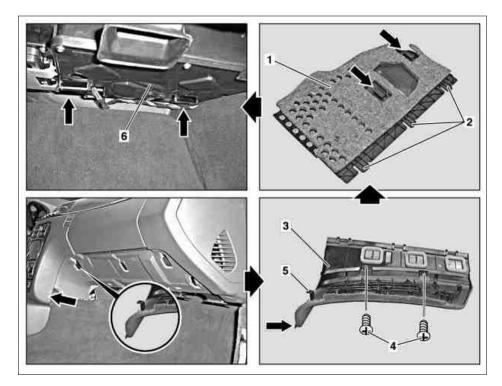

P68.10-2002-06

XX	Remove/install	
1	Remove cover (1) with catch lugs (2) out of knee protection (3) toward front and rear from both retaining brackets (arrows) on heater housing (6)	i Installation: Install both front catch lugs (arrows) for cover (1) into retaining bracket (arrows) on heater housing (6).
2	Unclip footwell illuminations from knee protection (3) and disconnect connector.	
3	Unscrew screws (4)	
4	Remove knee protection (3) with hooks (5), (4 each) downward out of instrument panel and simultaneously from center console.	Installation: Ensure that side guide lugs (arrow) of knee protection (3) are correctly installed in area of center console (arrow).
5	Install in reverse sequence.	