

MODEL 221.0

Paneling in rear on backrest

MODEL 221.1 except CODE (Z07) Top protection  
Paneling in rear on backrest




P68.30-3208-07

Shown on right paneling

- |   |                   |   |       |   |              |
|---|-------------------|---|-------|---|--------------|
| 1 | Trim              | 4 | Nuts  | 7 | Cover        |
| 2 | Door sill molding | 5 | Cover | 8 | Bolt         |
| 3 | Edge guard        | 6 | Nut   | 9 | Plate clamps |

☒ ☒	Removing, Install		
1	Remove left or right rear seat cushion and lay down to side with electrical line connected.	Model 221.0/1 without code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as pneumatically adjustable head restraints or Model 221.1 with code (224) Design rear bucket seat Model 221.0/1 with code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as pneumatically adjustable head restraints or Model 221.1 with code (224) Design rear bucket seat	AR91.12-P-1020SY  AR91.12-P-1020SX
2	Remove door sill molding (2)		AR68.30-P-4100SX
3	Detach edge guard (3) in area of door sill molding (2) and wheelhouse		
4	Unscrew nuts (4) from cover (5) and remove cover (5).		
5	Unscrew nut (6)		
6	Loosen cover (7) and screw out bolt (8)		
7	Unclip paneling (1) from bottom upward and remove	☒	*110589035900
8	Install in the reverse order		

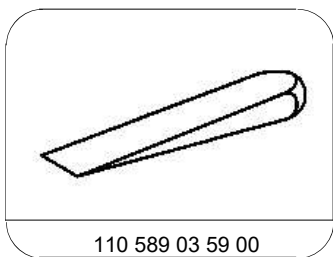

110 589 03 59 00

Wedge tool