


Fuse assignment of interior fuse box (F34)

21 to 42 Position for fuses
F34 Interior fuse box

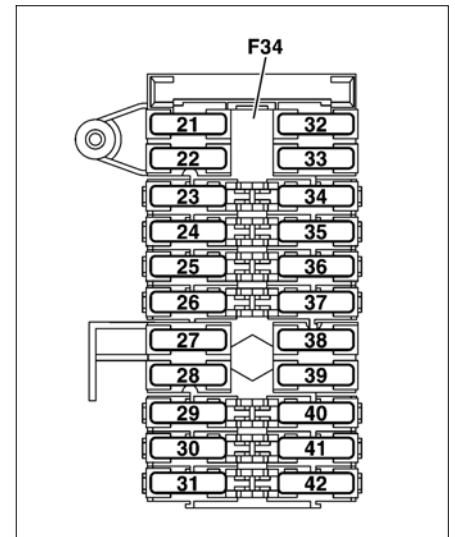

P54.15-2551-02

Position	Fuse	Identification color of fuse	Fused function	Rating in amperes (A)
21	F34f21	Beige	<ul style="list-style-type: none"> Soft top operation control unit (N52) 	5
22	F34f22	Beige	<ul style="list-style-type: none"> Roof operating unit control unit (N70) 	5
23	F34f23	white	Valid for code (403) Airscarf-System: <ul style="list-style-type: none"> Airscarf system for left seat 	25
24	F34f24	white	Valid for code (403) Airscarf-System: <ul style="list-style-type: none"> Airscarf system for right seat 	25
25	F34f25	white	Valid for code (873) heated seats, left and right front seat: <ul style="list-style-type: none"> Heated seats 	25
26	F34f26	green	Valid for code (523) MB Audio 20 radio, with code (525) MB Audio 50 APS radio, with code (535) Audio 20 CD radio, USA: <ul style="list-style-type: none"> Radio systems 	30
27	F34f27	white	<ul style="list-style-type: none"> Left door control module (N69/1) 	25
28	F34f28	white	<ul style="list-style-type: none"> Right door control module (N69/2) 	25
29	F34f29	bernstein	<ul style="list-style-type: none"> AC recirculation unit (A32) 	40
30	F34f30	Beige	<ul style="list-style-type: none"> Instrument cluster (A1) 	5
31	F34f31	red	Valid for code (443) steering wheel heater: <ul style="list-style-type: none"> Heated steering wheel 	10
32	F34f32	white	<ul style="list-style-type: none"> Right rear power window motor (M10/6) 	25
33	F34f33	Beige	Valid for left-hand drive vehicle: <ul style="list-style-type: none"> Steering column module (N80) 	5
34	F34f34	green	Valid for code (275a) memory package (driver seat, steering column, mirrors): <ul style="list-style-type: none"> Driver seat adjustment Valid for code (275a) memory package (driver seat, steering column, mirrors): <ul style="list-style-type: none"> Steering wheel adjustment 	30
35	F34f35	green	Valid for code (275a) memory package (driver seat, steering column, mirrors): <ul style="list-style-type: none"> Front passenger seat adjustment 	30
36	F34f36	blue	<ul style="list-style-type: none"> EIS [EZS] control unit (N73) Electric steering lock control unit (N26/5) 	15
37	F34f37	brown	<ul style="list-style-type: none"> Upper control panel control unit (N72/1) Mirror adjustment Vario roof (VD) control Duovalve (Y21) Valid for code (580a) automatic air conditioning or for code (581b) comfort automatic air conditioning: <ul style="list-style-type: none"> Automatic air conditioning (KLA) or comfort automatic air conditioning (C-AAC) Valid for code (500b) left/right left outside mirror/folding: <ul style="list-style-type: none"> Mirror folding-in 	7.5
38	F34f38	bernstein	<ul style="list-style-type: none"> Soft top mechanism hydraulic unit (A7/5) 	40
39	F34f39	white	<ul style="list-style-type: none"> Left rear power window motor (M10/5) 	25
40	F34f40	Beige	<ul style="list-style-type: none"> Data link connector (1.3) (X11/22) Central gateway control unit (N93) 	5

41	F34f41	Beige	<p>Valid for code (523) MB Audio 20 radio, with code (525) MB Audio 50 APS radio, with code (535) Audio 20 CD radio, USA:</p> <ul style="list-style-type: none"> ● Radio systems <p>Valid for code (526) COMAND operating and display system, navigation system with integral radio and CD insertion slot, with code (527) navigation module for COMAND, with code (528) HIGH Class USA, with code (529) HIGH Class Japan, with code (530) COMAND APS USA (with navigation):</p> <ul style="list-style-type: none"> ● Navigation system 	5
42	F34f42	Beige	<p>Valid for right-hand drive vehicles:</p> <ul style="list-style-type: none"> ● Steering column module (N80) 	5