


MODEL 221.0

MODEL 221.1 except CODE (Z07) Top protection

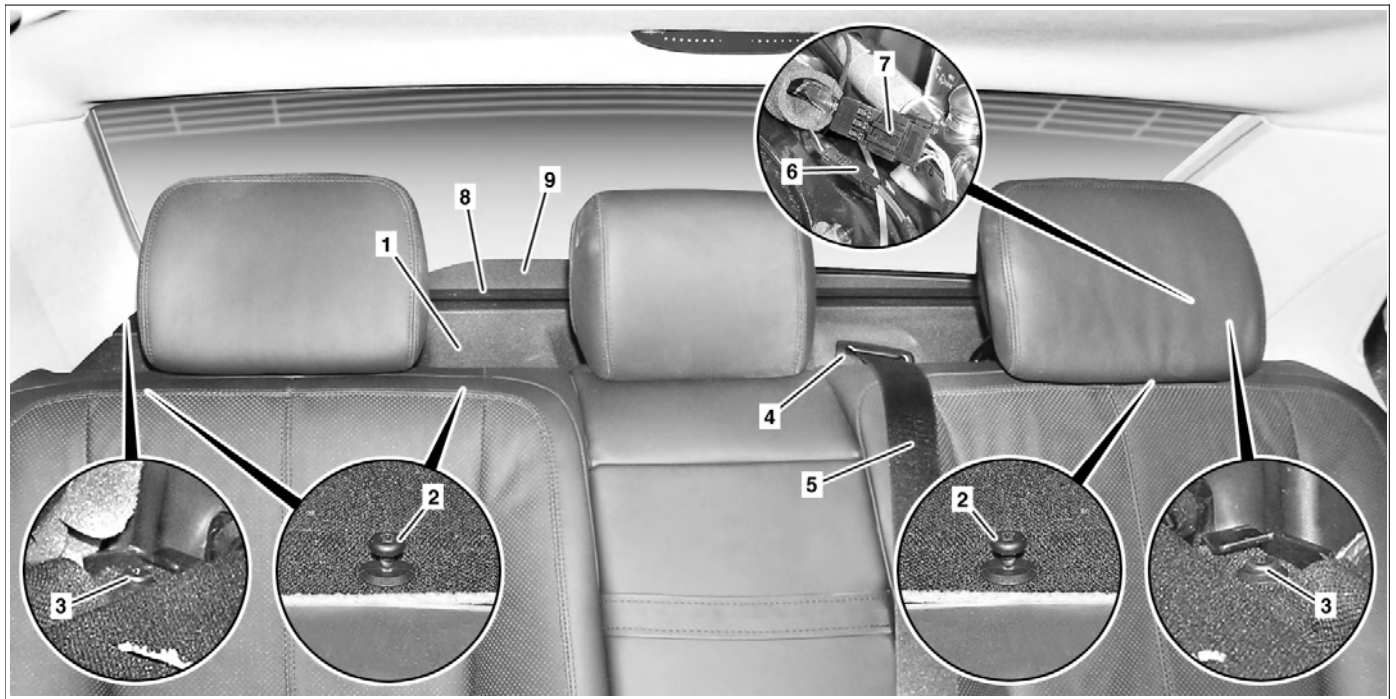


P68.30-3230-09

**Shown with code (540) Electric rear window roller blind**

- |   |  |   |  |   |  |
|---|--|---|--|---|--|
| 1 | Rear shelf paneling                                      | 5 | Center seat belt   | 8 | Roller blind (with code (540) Electric rear window roller blind) |
| 2 | Clip   | 6 | Electrical connector   | 9 | Paneling (with code (540) Electric rear window roller blind)     |
| 3 | Clip (with code (540) Electric rear window roller blind) | 7 | Electrical connector (with code (540) Electric rear window roller blind) |   |  |
| 4 | Covering   |   |  |   |  |

**Shown with code (540) Electric rear window roller blind**


- |     |                               |
|-----|-------------------------------|
| 10  | Side paneling                 |
| 11  | Side paneling                 |
| 12  | Bolt                          |
| E21 | Center high-mounted stop lamp |

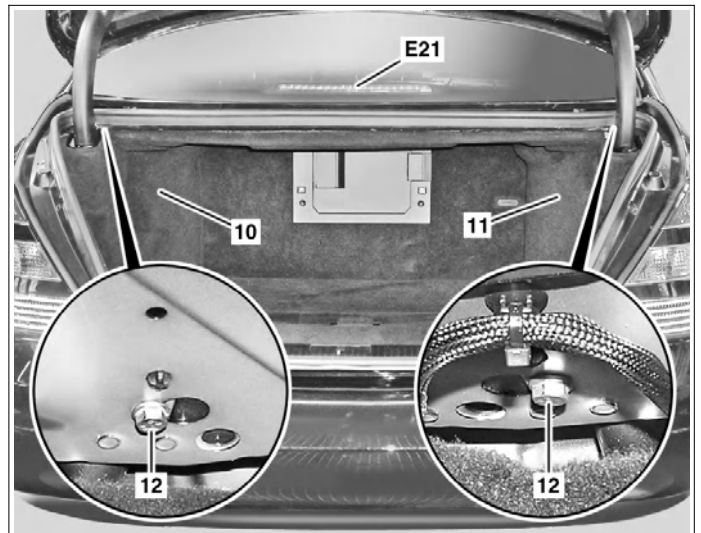

P68.30-3231-11

**Shown without code (540) Electric rear window roller blind**

- 1 Rear shelf paneling
- 13 Cover
- 14 Wiring harness
  
- E21 Center high-mounted stop lamp

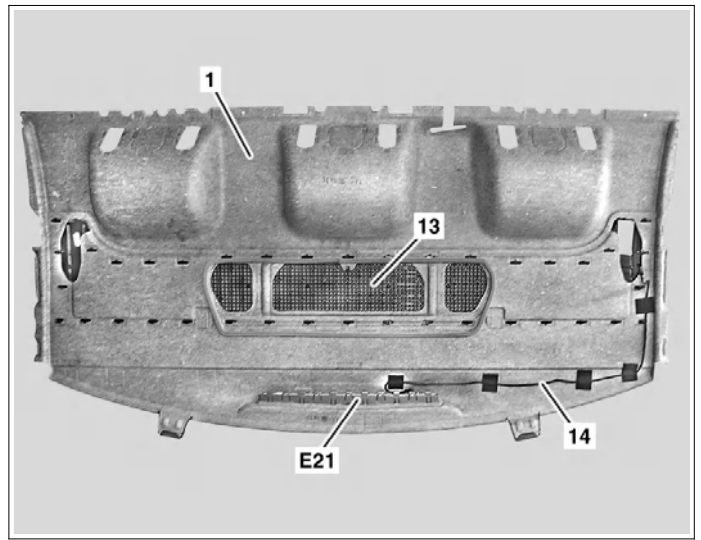

P68.30-3232-11

☒ ☒	Remove/install		
1	Remove rear seat backrest	<p><b>i</b> Do not remove center armrest</p> <p>Model 221.0/1 without code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as head restraints pneumatically adjustable or model 221.1 without code (224) Design rear bucket seats</p> <p>Model 221.0/1 with code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as head restraints, pneumatically adjustable or model 221.1 with code (224) Design rear bucket seats</p>	<p>AR91.12-P-1620SY</p> <p>AR91.12-P-1620SX</p>
2	Remove all head restraints in rear	<p>Model 221.0/1 without code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as head restraints pneumatically adjustable or model 221.1 without code (224) Design rear bucket seats</p> <p>Model 221.0/1 with code (223) Rear bench seat with electrically adjustable outer seats, lumbar supports as well as head restraints, pneumatically adjustable or model 221.1 with code (224) Design rear bucket seats</p>	<p>AR91.16-P-1770SX</p> <p>AR91.16-P-1770SY</p>
3	Remove paneling from left and right C-pillar.	<b>i</b> Do not remove belt end fittings.	AR68.30-P-4490SX
4	Remove clips (2)		
5.1	Remove clips (3)	On vehicles with code (540) Electric sun shade for rear window	
6	Loosen covering (4) and guide center seat belt (5) through recess in rear shelf paneling (1).		
7	Expose electrical connector (6) on center high-mounted stop lamp (E21) and disconnect.		
8.1	Disconnect electrical connector (7) from roller bind (8)	On vehicles with code (540) Electric sun shade for rear window	
9	Lift rear shelf paneling (1) and pull out toward front		
10.1	Unclip cover (13) from rear shelf paneling (1)	When replacing rear shelf paneling (1).	
11.1	Remove side paneling (10, 11) in trunk	On vehicles with code (540) Electric sun shade for rear window	AR68.30-P-4600SX
12.1	Unscrew bolts (12) from roller bind (8)	On vehicles with code (540) Electric sun shade for rear window	
13.1	Remove roller bind (8) with paneling (9)	On vehicles with code (540) Electric sun shade for rear window	
14.1	Expose electric wiring harness (14) from center high-mounted stop lamp (E21) and unclip center high-mounted stop lamp (E21) from paneling (9)	On vehicles with code (540) Electric sun shade for rear window	

14.2	Expose electric wiring harness (14) on center high-mounted stop lamp (E21) and unclip center high-mounted stop lamp (E21) from rear shelf paneling (1).	On vehicles without code (540) Electric rear window roller blind	
15.1	Remove paneling (9) from roller blind (8)	On vehicles with code (540) Electric sun shade for rear window	
16	Install in the reverse order		