


- 1 *Electrical connector*
- 5 *Bolts*

- M33 *Electric air pump*

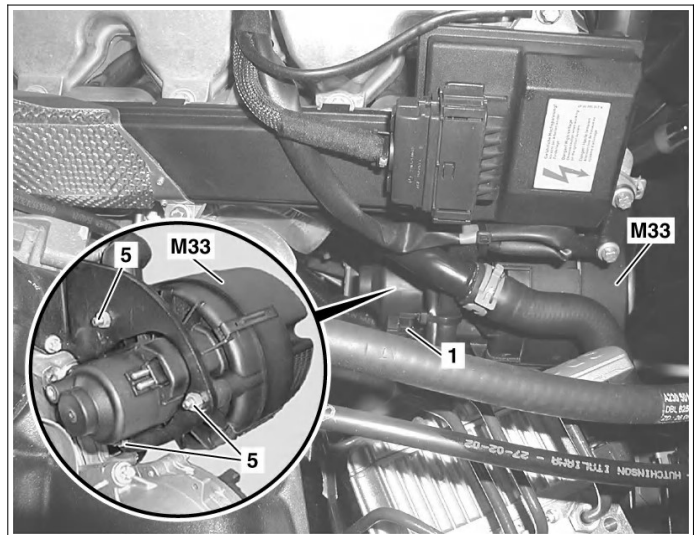

P14.30-2070-11

		Remove/install	
1		Remove engine trim panel	Engine 275.95 Engine 275.98 AR01.10-P-2405LA AR01.10-P-2405IM
2		Remove right engine intake air duct upstream of air filter housing	
3		Remove right air filter housing	AR09.10-P-1150LA
4		Disconnect electrical connector (1) at electrical air pump (M33)	
5		Remove bolts (5)	Nm *BA14.30-P-1001-01B
6		Detach air hose on electric air pump (M33)	i Installation: Ensure correct seating of air hose.
7		Take out electric air pump (M33) to the front	
8		Install in the reverse order	

Nm **Air pump**

Number	Designation		Engine 275
BA14.30-P-1001-01B	Air pump bolt/nut to bracket	Nm	8