
AR42.20-P-0505SX MODEL 216 MODEL 221.0 /1

Cover
 Bolt
 Catch spring

F1/7 Left instrument panel fuse box S76/15 Electric parking brake switch

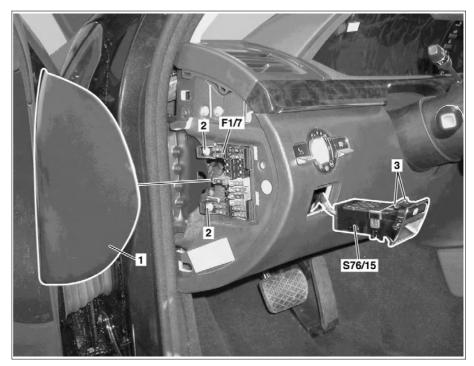

P42.20-2287-06

| XX | Remove/install | | |
|----|--|---|------------------|
| 1 | Turn off ignition | | |
| 2 | Disconnect ground lines from batteries | | AR54.10-P-0003SX |
| 3 | Lever out and remove left side cover (1) from instrument panel | 3 | *115589035900 |
| 4 | Loosen screw (2) | | |
| 5 | Pull left instrument panel fuse box (F1/7) out of instrument panel | Do not close driver door when left instrument panel fuse box (F1/7) is removed, otherwise the instrument panel, door lining and left instrument panel fuse box (F1/7) will be damaged. Installation: Observe routing of electrical feed lines. Do not squeeze electrical feed lines! | |
| 6 | Press catch springs (3) and pull electric parking brake switch (S76/15) forwards out of instrument panel | | |
| 7 | Unplug electrical connector and remove electric parking brake switch (S76/15) | | |
| 8 | Install in the reverse order | | |
| 4 | Check | | |
| 9 | Check function of electric parking brake switch (S76/15) | | |

