


Illustrated on model 221

- 1 Engine hood
- 2 Upper section of engine hood catch
- 3 Nuts

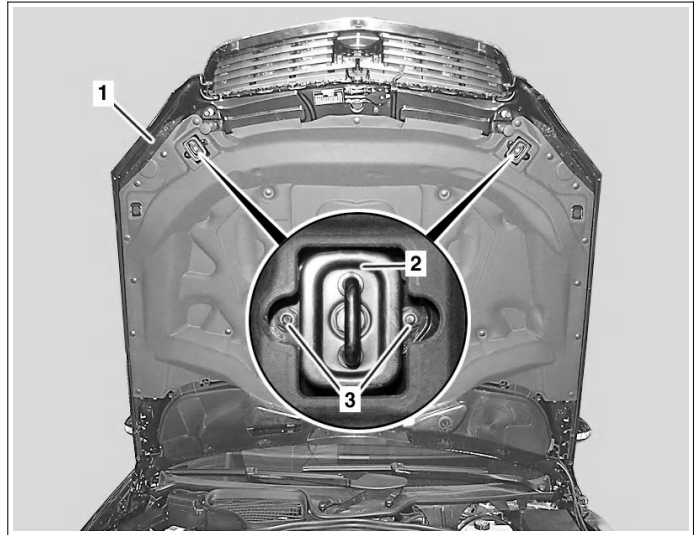


P88.40-2602-11

Shown on model 221 with code (551) Anti-theft alarm (ATA)

- 4 Bolts
- 5 Lower section of engine hood catch
- 6 Engine hood cable

S62 ATA engine hood switch (with code (551) Anti-theft alarm system (ATA))

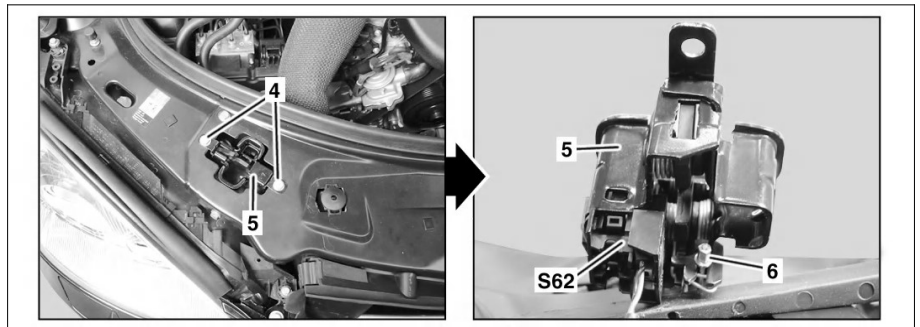

P88.40-2603-04

☒ ☒	Remove/install		
⚠ <b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Unscrew nuts (3) and remove engine hood catch upper section (2).		
2	Unscrew bolts (4) on engine hood catch lower section (5)		
3	Remove engine hood catch lower section (5) upward out of radiator crossmember and unhook engine hood cable (6)		
4.1	Remove ATA [EDW] hood switch (S62) on right engine hood catch lower section (5)	On vehicles with code (551) Anti-theft alarm system ATA [EDW]	
5	Remove engine hood catch lower section (5)		
6	Install in the reverse order		
7	Check engine hood adjustment, adjust if necessary.		AR88.40-P-3020SX