

Illustrated on model 221

- 1 Engine hood
- 2 Upper section of engine hood catch
- 3 Nuts




P88.40-2602-11

Shown on model 221 with code (551) Anti-theft alarm (ATA)

- 4 Bolts
- 5 Lower section of engine hood catch
- 6 Engine hood cable

S62 ATA engine hood switch (with code (551) Anti-theft alarm system (ATA))

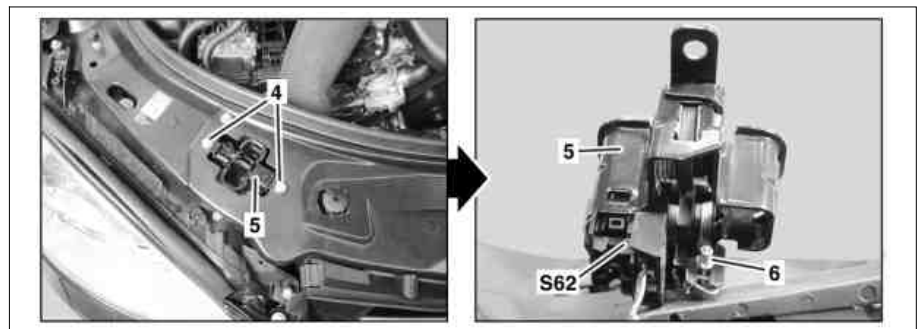

P88.40-2603-04

⚠ ⚠	Remove/install		
⚠ Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Unscrew nuts (3) and remove engine hood catch upper section (2).		
2	Unscrew bolts (4) on engine hood catch lower section (5)		
3	Remove engine hood catch lower section (5) upward out of radiator crossmember and unhook engine hood cable (6)		
4.1	Remove ATA [EDW] hood switch (S62) on right engine hood catch lower section (5)	On vehicles with code (551) Anti-theft alarm system ATA [EDW]	
5	Remove engine hood catch lower section (5)		
6	Install in the reverse order		
7	Check engine hood adjustment, adjust if necessary.		AR88.40-P-3020SX