














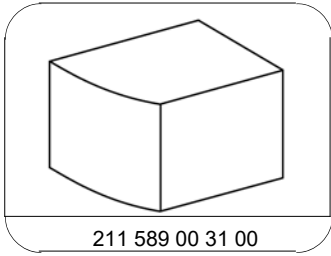


Model 217

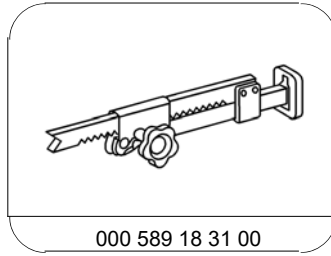
Model 222

	Measure		
1 WS	Drive vehicle onto measuring station 000 588 13 21 00 Suspension measuring unit	 The measuring system must be approved by Mercedes-Benz.	WS40.00-P-0013B
2	Switch off easy entry/exit	 It is switched off using the buttons on the steering wheel in the "Comfort" menu on the multifunction display, see vehicle owner's manual.	
3	Open window in driver door	 Preparations for checking steering lock.	
4	Carry out conditions and tests for chassis alignment		AR40.20-P-0260SX
5	Unlock turnplates and sliding platforms		
6	Raise vehicle level and then lower again	 To do so, press the switch on the center console. Raising and lowering the vehicle reduces play in the suspension.	
7	Insert brake pedal jack with adapter for brake pedal jack between the brake pedal and driver seat and close driver door	 Protect brake pedal and driver's seat against any damage. The vehicle must not be loaded again.  Brake pedal jack  Adapter for brake pedal winch	*000589183100 *211589003100
8	Check vehicle level at front and rear axle with electronic inclination meter and adjust, if necessary		AR40.20-P-0301LF
9	Attach Mercedes-Benz quick-clamping devices		AR40.20-P-0230SX
10	Fit on measuring heads	 See corresponding operator's manual of manufacturer.	
11	Perform initial measurement	 See corresponding operator's manual of measurement system.	
12	Checking rear axle camber	 The camber on the rear axle is not adjustable.	AR40.20-P-0331LF
13	Adjust rear-axle toe	According to results of initial measurement.	AR40.20-P-0261LF
14	Adjust camber and caster at the front axle	According to results of initial measurement.	AR40.20-P-0263LF
15	Adjust front axle toe	According to results of initial measurement.	AR40.20-P-0264LF
16	Check toe-out angle	According to results of initial measurement.	AR40.20-P-0325LF
17	Perform final measurement	 If the vehicle specified values are not achieved, operation steps 13 to 15 must be repeated.	
18	Detach measuring heads		
19	Detach Mercedes-Benz quick-clamping devices		AR40.20-P-0230SX
20	Remove brake pedal jack tool with its adapter	 Adapter for brake pedal winch  Brake pedal jack	*211589003100 *000589183100
21	Lock turntables and sliding platforms		
22	Drive vehicle off measuring system		
23	Switch on easy entry and exit feature	 It is switched on using the buttons on the steering wheel in the "Comfort" menu on the multifunction display, see vehicle owner's manual.	
24 AP AP	Check headlamp adjustment	Model 217 Model 222	AP82.10-P-8260S AP82.10-P-8260HA



211 589 00 31 00

Adapter for brake pedal winch



000 589 18 31 00

Brake pedal jack