


MODEL 217

MODEL 222

- 1 Slide
- 2 Cover
- 2a Tab
- 3 AC housing
- 3a Cutout
- 4 Activated charcoal dust filter
- 5 Screw

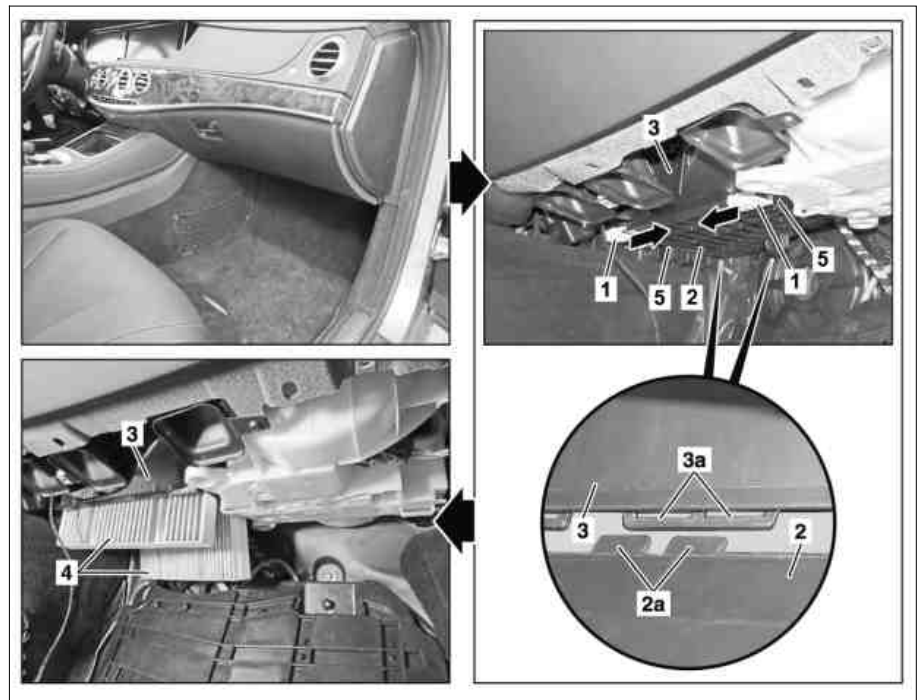

P83.00-2376-06

	Remove/install		
1 	Remove right cover below instrument panel	MODEL 217, 222.0/1	AR68.10-P-1520LF
2	Remove bolts (5) from air conditioner housing (3)		
3	Unlock both sliders (1) in direction of arrow and remove cover (2) from air conditioner housing (3)	i Installation: Insert lugs (2a) of cover (2) into recesses (3a) of air conditioner housing (3).	
4	Take both activated charcoal dust filters (4) downward out of air conditioner housing (3)	i Installation: Note the installation position! The arrow marked on the activated charcoal dust filter_(4) must point toward the blower motor. i Replace activated charcoal dust filter_(4); do not clean.	
5	Install in the reverse order		