



MODEL 222.0/1

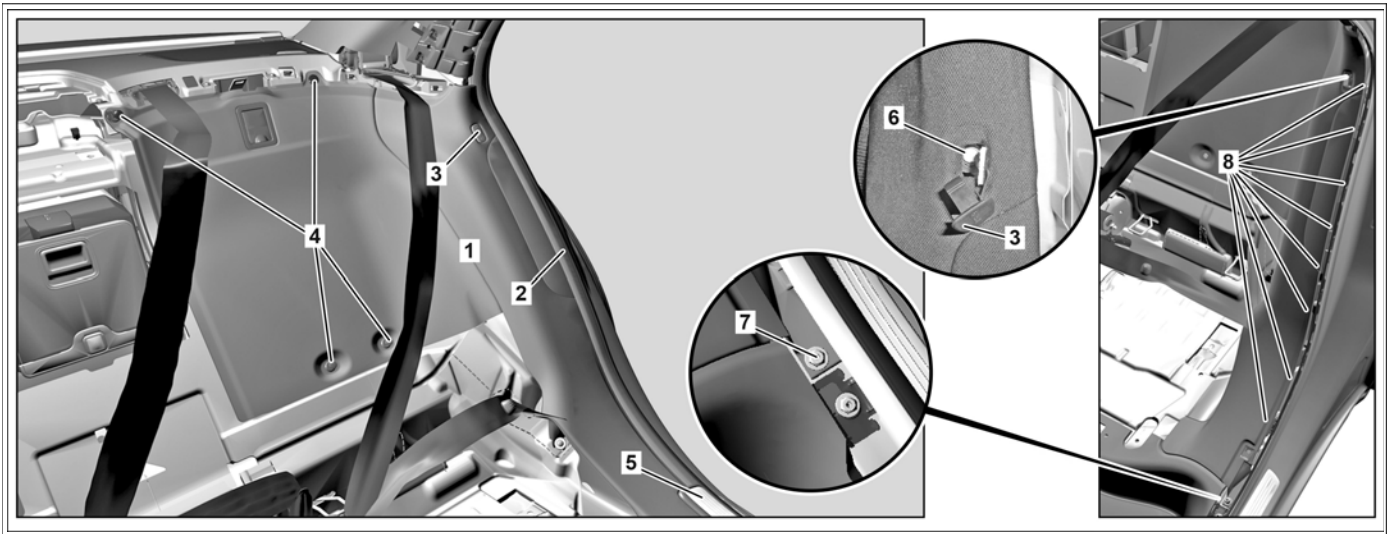

P68.30-3705-08

Shown on vehicle with CODE 223 (Electrically adjustable rear bench seat)

- | | |
|------------------|-------------|
| 1 Side paneling | 5 Door sill |
| 2 Edge guard | 6 Screw |
| 3 Cover | 7 Nut |
| 4 Expansion clip | 8 Clips |

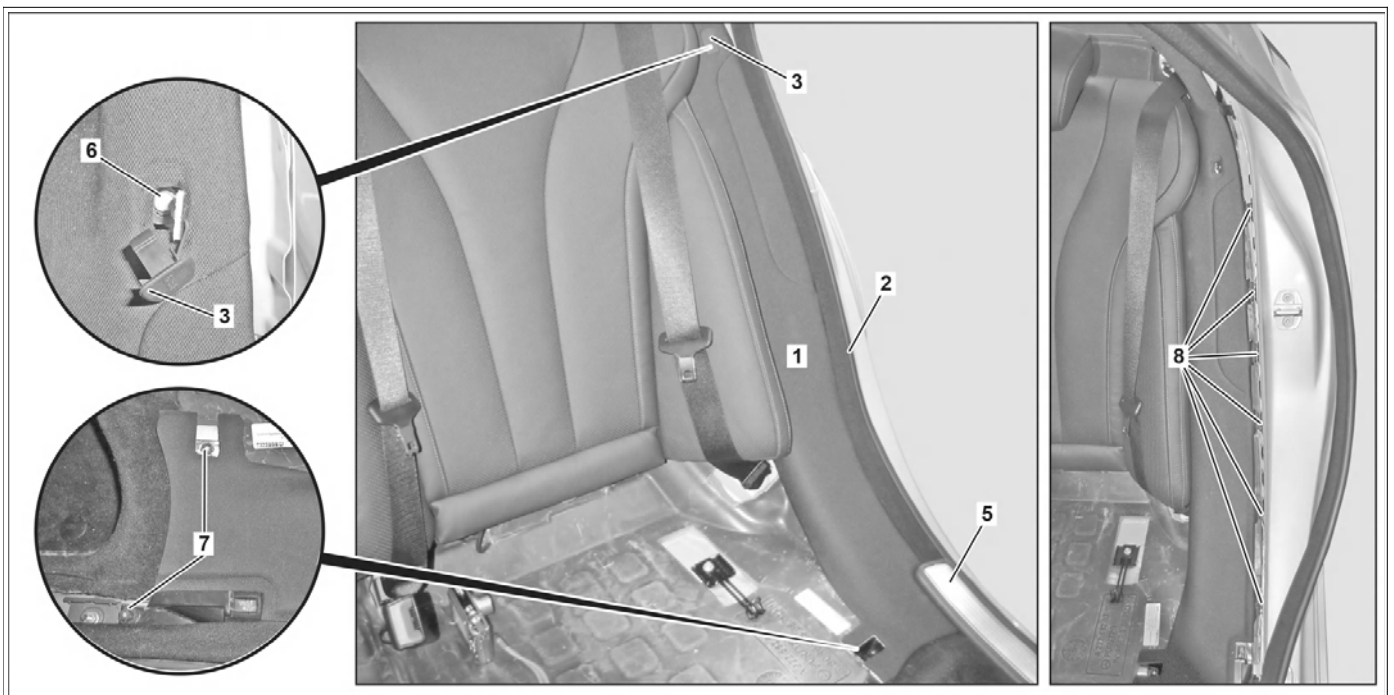

P68.30-3709-09

Shown on vehicle except CODE 223 (Electrically adjustable rear bench seat)

- | | |
|-----------------|---------|
| 1 Side paneling | 6 Screw |
| 2 Edge guard | 7 Nut |
| 3 Cover | 8 Clips |
| 5 Door sill | |

☒ ☒	Remove/install		
1	Remove seat cushion	MODEL 222.0/1 without CODE 223 (Electrically adjustable rear bench seat) without CODE 224 (Rear individual seat design) MODEL 222.0/1 with CODE 223 (Electrically adjustable rear bench seat) MODEL 222.0/1 with CODE 224 (Rear individual seat design)	AR91.12-P-1020LF AR91.12-P-1020LFA
2	Remove seat backrest	MODEL 222.0/1 without CODE 223 (Electrically adjustable rear bench seat) without CODE 224 (Rear individual seat design) MODEL 222.0/1 with CODE 223 (Electrically adjustable rear bench seat) MODEL 222.0/1 with CODE 224 (Rear individual seat design)	AR91.12-P-1620LF AR91.12-P-1620LFA
3	Remove armrest from backrest	MODEL 222.0/1 with CODE 223 (Electrically adjustable rear bench seat)	AR91.12-P-1745LFA
4	Remove trim piece behind rear seat	MODEL 222.0/1 with CODE 223 (Electrically adjustable rear bench seat)	AR68.30-P-1460LF
5	Remove door sill molding (5)		
6	Detach edge guard (2) in area of side paneling (1)		
7	Remove cover (3) and unscrew bolt (6)		
8	Remove expansion clips (4)	On vehicles with CODE 223 (Electrically adjustable rear bench seat)	
9	Unscrew nuts (7)		
10	Unclip clips (8) on side paneling (1) from bottom upward and remove side paneling (1)		
11	Install in the reverse order		