


MODEL 222.0/1/9
with CODE 223 (Electrically adjustable rear bench seat)

MODEL 222.0/1/9
with CODE 224 (Rear individual seat design)

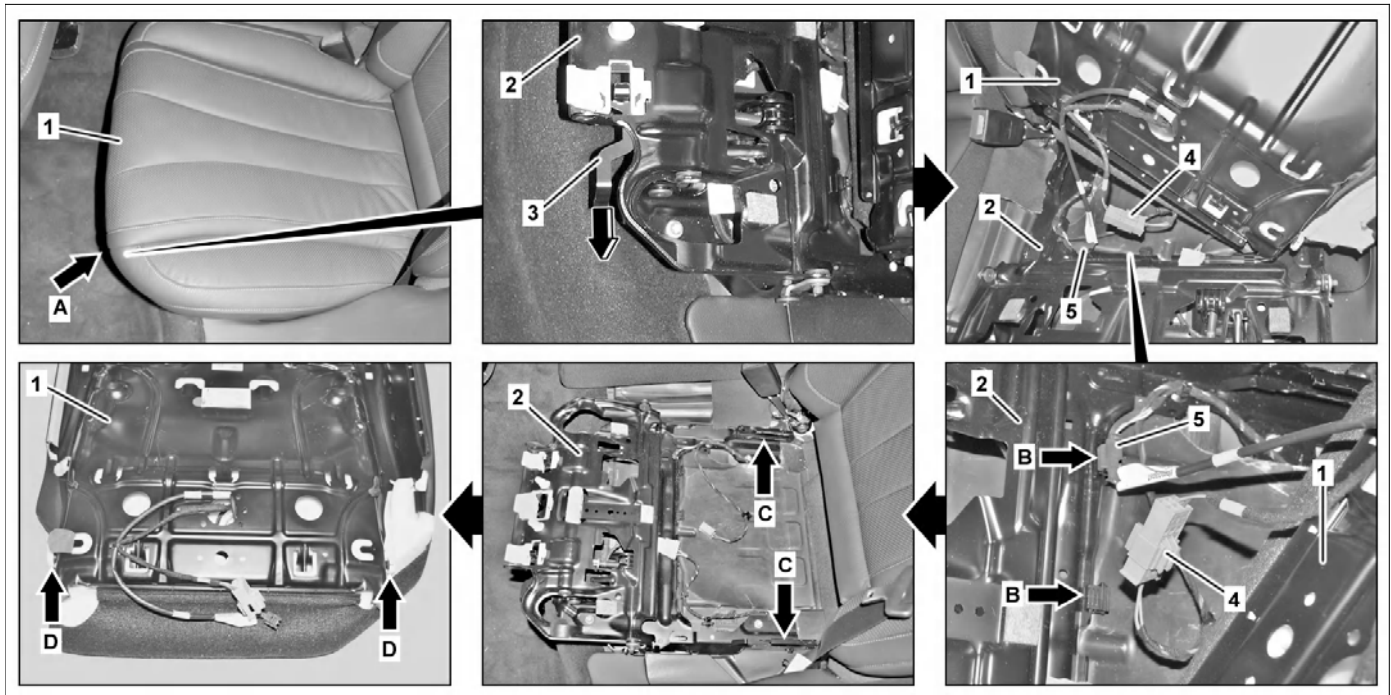

P91.12-3677-09

Shown on left side of vehicle

- | | |
|-----------------|------------------------|
| 1 Seat cushion | 4 Electrical connector |
| 2 Seat frame | 5 Electrical connector |
| 3 Release lever | |

	Risk of injury. Moving parts can pinch, crush or, in extreme cases even sever extremities.	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
	Remove/install		
1	Move front seat as far forward as it will go		
2	Move seat cushion (1) as far forward as it will go		
3	Release seat cushion (1) and lift up far enough until the electrical connections (4, 5) can be disconnected	<p>i Reach under the seat cushion (1) (arrow A) and pull release lever (3) on seat frame (2) outwards.</p> <p>i Installation: Ensure that sliders (arrows D) are seated correctly in guides (arrows C) of seat frame (2). The seat cushion (1) must latch audibly into the release lever (3) of the seat frame (2).</p>	
4	Remove electrical connectors (4, 5) from brackets (arrows B), release and disconnect	i The number of electrical connectors (4, 5) differs depending on the vehicle equipment.	
5	Remove seat cushion (1) from vehicle	<p>w Carefully remove seat cushion (1) from vehicle. Otherwise components of the vehicle may be damaged.</p>	
6	Install in the reverse order		