Model 222

with code P46 (Rear-Seat Entertainment Package)

Modification notes


27.06.2017

Teaching components added.

Operation steps 8 and 9.

Shown on model 222 up to model year 2018

A40/5 Left rear display A40/6 Right rear display

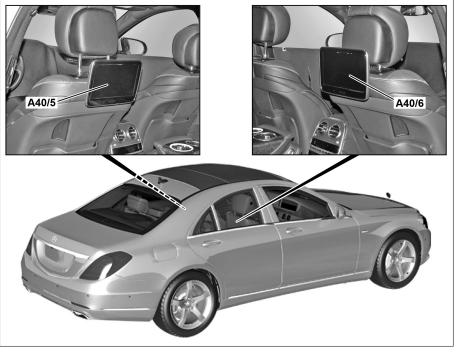

P82.90-2514-06





P82.60-9192-09

Shown on model 222 up to model year 2018

- Cover
- 2 Electrical connector

Bolts A40/5 Left rear display

3 Electrical line
© Mercedes-Benz AG, 2/1/22, X/01/22, ar82.60-p-7720lf, Remove/install display in rear Model 222 with code P46 (Rear-Seat Entertainment Package)

Topical note	Notes on avoiding damage to optical fibers during repair work		AH82.60-P-0001-05AK
Topical note	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
XX	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Take off cover (1)		
3	Disconnect electrical connection (2)		
4	Pull out the electrical line (3) from the guide at the left rear display (A40/5) or the right rear display (A40/6)		
5	Remove screws (4)		
6	Remove left rear display (A40/5) or right rear display (A40/6) from respective seat		
7	Install in the reverse order		
	Teach components		
8	Teach the radio frequency headphones (H8/3) to the left rear display (A40/5)	When renewing the left rear display (A40/5), one or both radio frequency headphones(H8/3).	
₽ AD			AD00.00-P-2000-04B
9	Teach the radio frequency headphones (H8/3) and the COMAND remote control at the right rear display (A40/6)	When renewing the right rear display (A40/6), one or both radio frequency headphones (H8/3) or the COMAND remote control.	
⊯ AD			AD00.00-P-2000-04B