
MODEL 217 MODEL 222

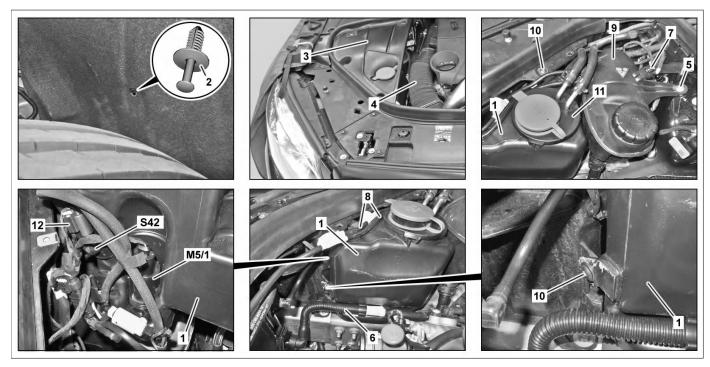


P82.35-2736-09


Shown on MODEL 222 with CODE 874 (MAGIC VISION CONTROL, heated)

1	Washer fluid reservoir	6	Coolant line	11	Heat exchanger (with CODE 874 (MAGIC VISION CONTROL, heated))
2	Expansion rivet	7	Electrical connector	12	Electrical connector
3	Cover	8	Coolant lines	M5/1	Windshield washer system pump
4	Intake air duct upstream of air filter	9	Coolant expansion reservoir	S42	Windshield washer system washer fluid level switch
5	Screw	10	Screw		

<u> </u>	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
X	Remove/install		
2	Raise vehicle		
3	Remove expansion rivet (2) from right front fender liner	S Clip remover	*452589016300
4	Open engine hood		
5	Remove right intake air duct upstream of air filter (4)		
6	Remove cover (3)		
7	Unclip coolant line (6) from washer fluid reservoir (1)		
8	Unclip coolant lines (8) from washer fluid reservoir (1)		
9	Disconnect electrical connector (7)		
10	Remove screw/bolt (5)		
11	Unclip coolant expansion reservoir (9) from the supports and place to one side with connected coolant lines (8)		
12	Remove screws/bolts (10)		
13	Raise washer fluid reservoir (1) far enough until the windshield washer system pump (M5/1) is accessible		

14	Remove windshield washer system pump (M5/1) from washer fluid reservoir (1) and place to one side with connected electrical line and washer fluid hose	i Collect washer fluid which flows out.	
		i Installation: Replace seal.	
		Mounting wedge	*110589035900
15	Remove infrared camera washer fluid pump	MODEL 217, 222	
	from the washer fluid reservoir (1) and place to one side with connected electrical line and washer fluid hose	with CODE 610 (Night View Assist Plus)	
		i Installation: Replace seal.	
		Mounting wedge	*110589035900
16	Disconnect electrical connection (12)		
17	Remove heat exchanger (11) from washer fluid reservoir (1) and place to one side with connected coolant lines	MODEL 217 MODEL 222 with CODE 874 (MAGIC VISION CONTROL, heated)	
18	Take off washer fluid reservoir (1)		
19	Remove switch for windshield washer system washer fluid level (S42) from washer fluid reservoir (1)	When replacing the washer fluid reservoir (1).	
20	Install in the reverse order		
21	Fill washer fluid reservoir (1)		
₩FAP			AP82.35-P-8210HA

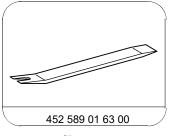

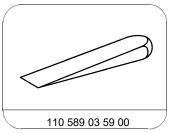

Clip remover

Mounting wedge