
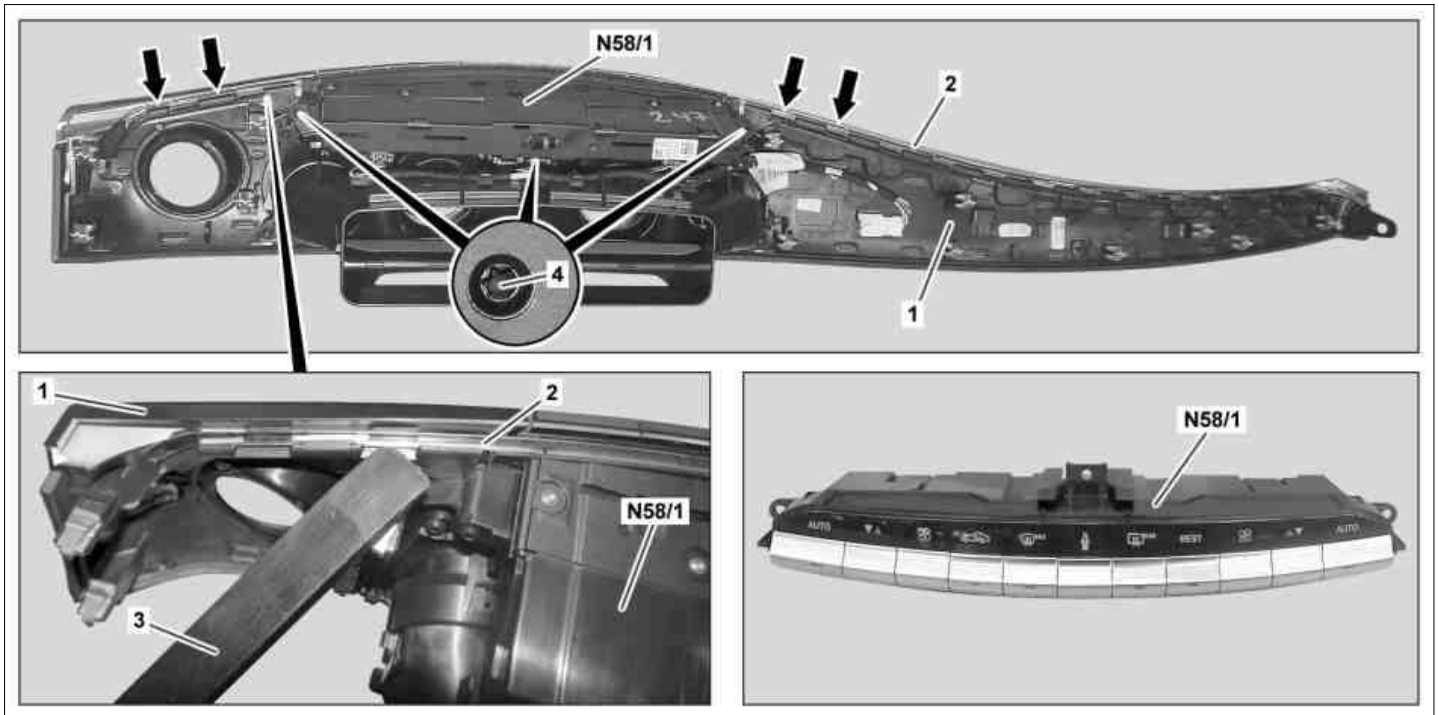



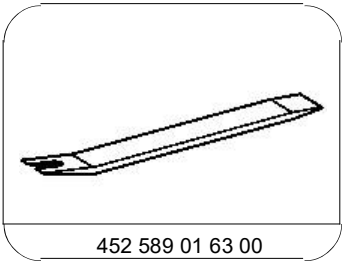
MODEL 222.0/1/9



P54.21-3365-09

- |   |               |   |              |       |                                      |
|---|---------------|---|--------------|-------|--------------------------------------|
| 1 | Trim piece    | 3 | Clip remover | N58/1 | Front climate control operating unit |
| 2 | Optical fiber | 4 | Screw        |       |                                      |

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
⊗ ⊗	<b>Remove/install</b>		
1	Remove trim piece (1) from instrument panel		AR68.10-P-1180LF
2	Unclip optical fiber (2) at marked positions (arrows) from trim piece (1)	ⓘ Carefully unclip optical fiber (2) with  clip remover (3). Otherwise damage to the optical fiber (2) may occur that requires an exchange of the optical fiber (2).  Clip remover	*452589016300
3	Remove bolts (4)		
4	Carefully lift optical fiber (2) and remove front climate control operating unit (N58/1) from trim piece (1)		
5	Install in the reverse order		



452 589 01 63 00

Clip remover