


**MODEL 124, 129, 140, 202 with CODE (880a) Infrared remote central locking**  
**MODEL 124 with CODE (885) Infrared remote central locking with immobilizer**  
**MODEL 124 as of 1.3.96**  
**MODEL 129, 140, 202 as of 1.12.94 up to 31.5.97**  
**MODEL 210 up to 28.2.97**

*a Transmitter window*  
*b Push-button*

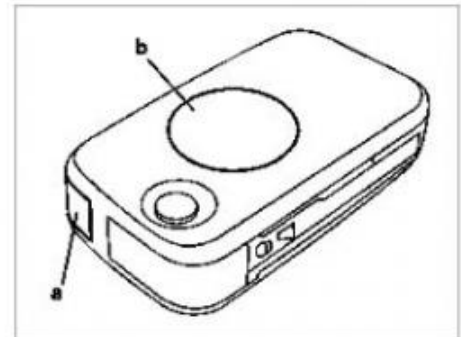

P80.30-0202-01

|          |  |  |  |
|----------|--|--|--|
| <b>i</b> | If the vehicle cannot be locked and unlocked it is necessary to synchronize the locking system   |  |  |
| 1        | Point window in remote control key (a) at a receiver   |  |  |
| 2        | Press button (b) momentarily.  |  |  |
| 3.1      | <b>Vehicles up to 12/93</b><br>Lock or unlock vehicle within next 30 seconds with folding key in remote control key in lock cylinder   |  |  |
| 3.2      | <b>Vehicles as of 01/94 and RCL control modules with part no. 202 820 40 26, 202 820 43 26</b><br>Switch on ignition with folding key in remote control key within the next 30 seconds |  |  |
| 4        | <b>Vehicles as of 12/94 and RCL control modules with part no. 210 820 21 26, 210 820 22 26, or with part no. 210 820 27 26, 210 820 28 26, 210 820 32 26</b>                           |  |  |
| 4.1      | Point window in remote control key (a) at receiver in interior mirror  |  |  |
| 4.2      | Press button (b) momentarily twice   |  |  |
| 4.3      | Turn key in steering lock to position "2" within the next 30 seconds   |  |  |