


AR82.10-P-5375R	Remove/install center high-mounted stop lamp	10.1.06
-----------------	--	---------

## MODEL 230.4

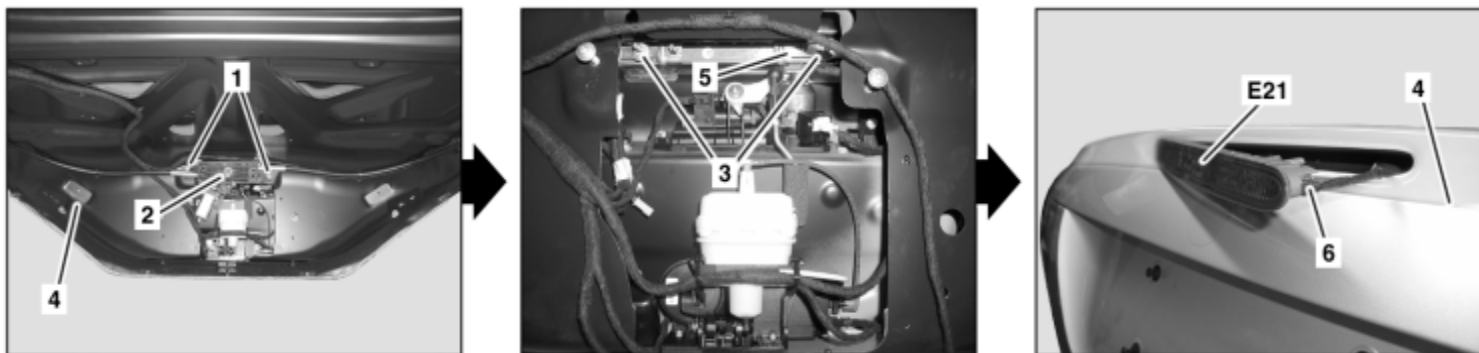

P82.10-2782-07

1 Bolts  
2 Side flaps drive gear  
3 Nuts

4 Trunk lid  
5 Bracket  
6 Electrical connector

E21 Center high-mounted stop lamp

	Remove/install		
1	Remove paneling from trunk lid		<a href="#">AR68.30-P-8150R</a>
2	Undo screws (1) and remove side flaps drive gear (2) from trunk lid (4)	Do not disconnect electrical connector from side flaps motor.	
			<a href="#">BA77.30-P-1007-01B</a>
3	Undo nuts (3) and remove bracket (5) out of trunk lid (4)		
4	Pull center high-mounted stop lamp (E21) out of trunk lid (4)	Until electrical connector (6) is accessible.	
5	Disconnect electrical connector (6) and remove center high-mounted stop lamp (E21)		

6	Install in the reverse order		
---	------------------------------	--	--

**Nm** Soft top

Number	Designation		Model 230
BA77.30-P-1007-01B	Bolt, gear of side flap drive to rear flap	Nm	8