



MODEL 230.467 /474 /475 /476

- 1 Selector lever boot
- 2 Shift lever knob lock
- 3 Selector lever handle

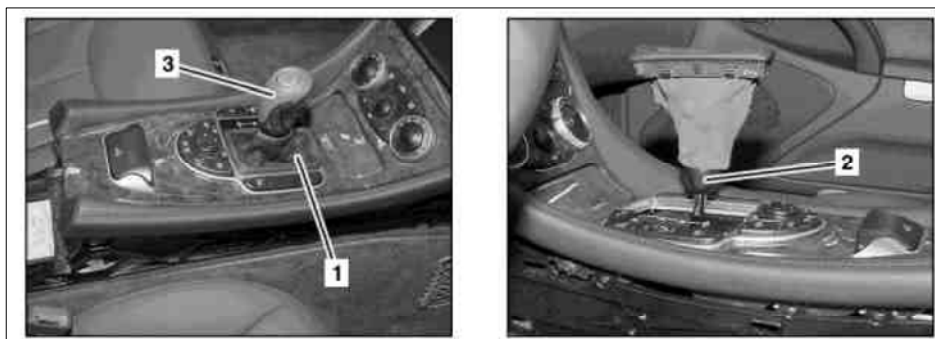

P68.20-2481-04

☒ ☒	Remove/Install		
1	Move selector lever to position "N"	<input type="checkbox"/> i Secure vehicle to prevent it rolling.	
2	Unclip selector lever boot (1) with assembly wedge	<input type="checkbox"/>	*110589035900
3.1	Move selector lever into position "P" and switch off ignition, detach remote control key from EILS control module	Only on vehicles with code (889) Keyless go <input type="checkbox"/> i Repeat pressing keyless go start/stop button until the ignition has switched off. Remove keyless go transmitter card or remote control key from vehicle and keep outside of transmitter range (min. 2 m).	
4	Remove selector lever handle (3) together with selector lever boot (1)	<input type="checkbox"/> i Turn lock of shift lever knob (2) 90° counterclockwise.	
5	Install in the reverse order		

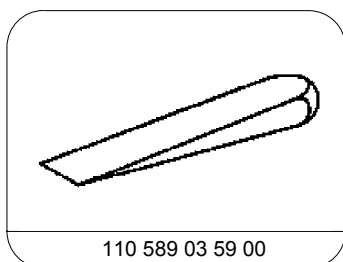

110 589 03 59 00

Assembly wedge