


MODEL 230.4



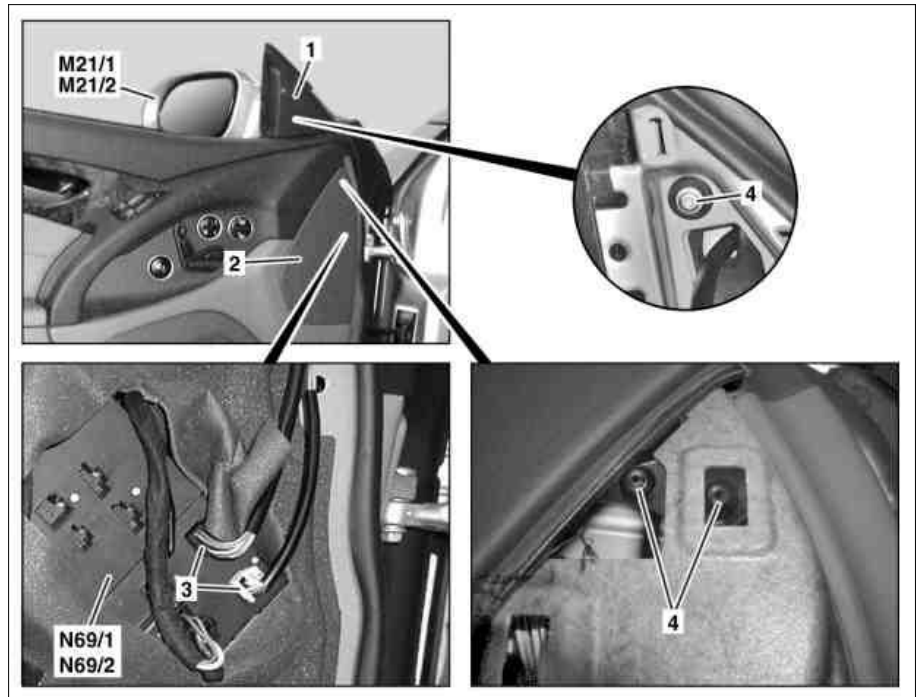



Shown vehicle up to production period 28.1.08 on left front door

- 1 Trim
- 2 Cover
- 3 Electrical connectors
- 4 Bolts

- M21/1 Left electrically adjustable and heated outside mirror
- M21/2 Right electrically adjustable and heated outside mirror
- N69/1 Door control module left
- N69/2 Door control module right




P88.70-2394-06

 	Remove/install		
1	Unclip paneling (1) from front door with assembly wedge		*110589035900
2	Unclip cover (2) from door liner with assembly wedge		*110589035900
3	Disconnect electrical connectors (3) from left door control unit (N69/1) or right door control unit (N69/2)		
4	Unscrew bolts (4) and remove left electrically adjustable and heated outside mirror (M21/1) or right electrically adjustable and heated outside mirror (M21/2)		*BA88.70-P-1001-01A
			On vehicles code (809) Model year 2009 assemble left electrically adjustable and heated outside mirror ((M21/1) or right electrically adjustable and heated outside mirror (M21/2) before replacement. Refer to: ↓ Remove/install paneling on mirror triangle
5	Install in the reverse order		AR88.70-P-9080P

 Outside mirror

Number	Designation	Model
BA88.70-P-1001-01A	Screw, outside mirror to front door	Nm 2

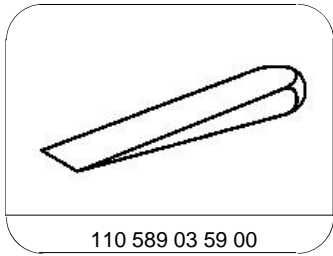

110 589 03 59 00

Mounting wedge