
AR68.20-P-2350RA Remove/install cover on center console	1.2.06
---------------------------------------------------------	--------

Page 1 of 2

MODEL 230.4 as from 15.1.04

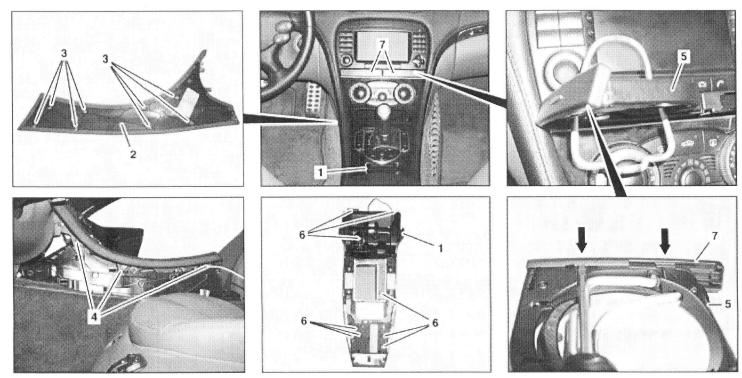

P68.20-3274-09

1 Center console cover 2 Trim 3 Retaining clips 4 Bolts 5 Beverage holder 6 Electrical connections 7 Beverage holder cover

Modification notes

19.1.06	Disconnect ground line replaced by switch off	Step 10	
	ignition		

	Remove/install	
1	Move driver and front passenger seat downward and toward rear.	
2	Remove cover on gearshift lever	AR68.20-P-2310R

© 2007 Mercedes-Benz USA, LLC

AR68.20-P-2350RA

D	0	00	
Page	1	of 2	
1 upu	-	01 2	

3.1	Switch on ignition, actuate brake pedal, shift to selector lever position "N" and switch off ignition again.	On vehicles with transmission 722	
4	Unclip left and right paneling (2) from retaining clips (3) with mounting wedge and remove	3	<u>110 589 03 59 00</u>
5	Remove bolts (4)		
6	Open beverage holder (5) and unclip beverage holder cover (7) with suitable screwdriver (arrows).		
7	Open stowage tray in center console		
8	Close beverage holder (5) and lift center console cover (1) until connectors on electrical connections (6) are accessible.		
9.1	Move selector lever to position "P"	On vehicles with transmission 722	
10	Switch off the ignition and remove the transmitter key from the EIS control unit	i On vehicles with code (889) Keyless Go, press the Keyless Go start/stop button repeatedly until the ignition is switched off. Remove the Keyless Go transmitter card or transmitter key from the vehicle and store beyond the reach of the transmitter (min. 2 m).	
11	Disconnect connectors from electrical connections (6) and remove center console cover (1).		
12	Install in the reverse order		

110 589 03 59 00

Mounting wedge