

Document number: pe91.60-p-2101-97ka


Document title: Wiring diagram for airbag control unit with integrated emergency call system


Code:	Designation:	Position:
A1	Instrument cluster	12L
A1e15	Airbag indicator and warning lamp	14L
A35/17	D2B telephone and TELE AID transmitter/receiver	54L
A35/8	E-call control unit	
A35/8	E-call control unit	
A45	Fanfare horns and airbag clock spring contact	20J
A45x1	Clock spring contact and airbag connector	22K
A53	Left sidebag sensor	46L
A54	Right sidebag sensor	47L
E16	Automatic child seat recognition airbag OFF indicator lamp	6L
K40/2	Driver-side fuse and relay module	3L
K40/2f10	Fuse 10	
K40/2f6	Fuse 6	2L
N2/7	Restraint systems control unit	4A
N2/7	Restraint systems control unit	12A
N2/7	Restraint systems control unit	20A
N2/7	Restraint systems control unit	28A
N2/7	Restraint systems control unit	36A
N2/7	Restraint systems control unit	45A
N2/7	Restraint systems control unit	52A
N3/10	ME-SFI [ME] control unit	50L
N32/1	Left front seat adjustment control unit with memory	27L
N32/2	Right front seat adjustment control unit with memory	34L
N72	Lower control panel control unit	9L
N80	Steering column module	20L
R12/1	Driver ETR [GUS] squib	42L
R12/13	Driver airbag ignition squib 1	23L
R12/14	Driver airbag ignition squib 2	24L
R12/2	Front passenger ETR [GUS] squib	44L
R12/20	Left front sidebag squib	37L
R12/21	Right front sidebag squib	39L
R12/25	Driver kneebag squib	40L
R12/4	Front passenger airbag squib 1	15L
R12/5	Front passenger airbag squib 2	17L
S68/3	Left front seat belt buckle restraint systems switch	30L
S68/4	Right front seat belt buckle restraint systems switch	31L
U1	Valid for USA	28G
U1	Valid for USA	40A
U1	Valid for USA	

Document number: pe91.60-p-2101-97ka

Document title: Wiring diagram for airbag control unit with integrated emergency call system

Code:	Designation:	Position:
U12	Valid for left-hand drive vehicles	26D
U12	Valid for left-hand drive vehicles	36D
U13	Valid for right-hand drive vehicles	26D
U13	Valid for right-hand drive vehicles	26D
U19	Valid for M112.973, M113.963	48G
U200	Valid for TELE AID	52G
U201	Valid for Emergency Call	
U388	Valid for SL 600	
U425	Valid for SL 55 AMG	48H
U52	Valid for Japan	
W26	Ground (restraint systems control unit)	12E
W26	Ground (restraint systems control unit)	47G
X11/4	Data link connector	46E
X28/24	TELE AID digital crash input connector	54E
X28/8	Driver seat separation point/ETR [GUS] connector (2-pin)	42E
X28/9	Passenger seat separation point/ETR [GUS] connector (2-pin)	44E
Z53/9	Interior connector sleeve (airbag)	19G

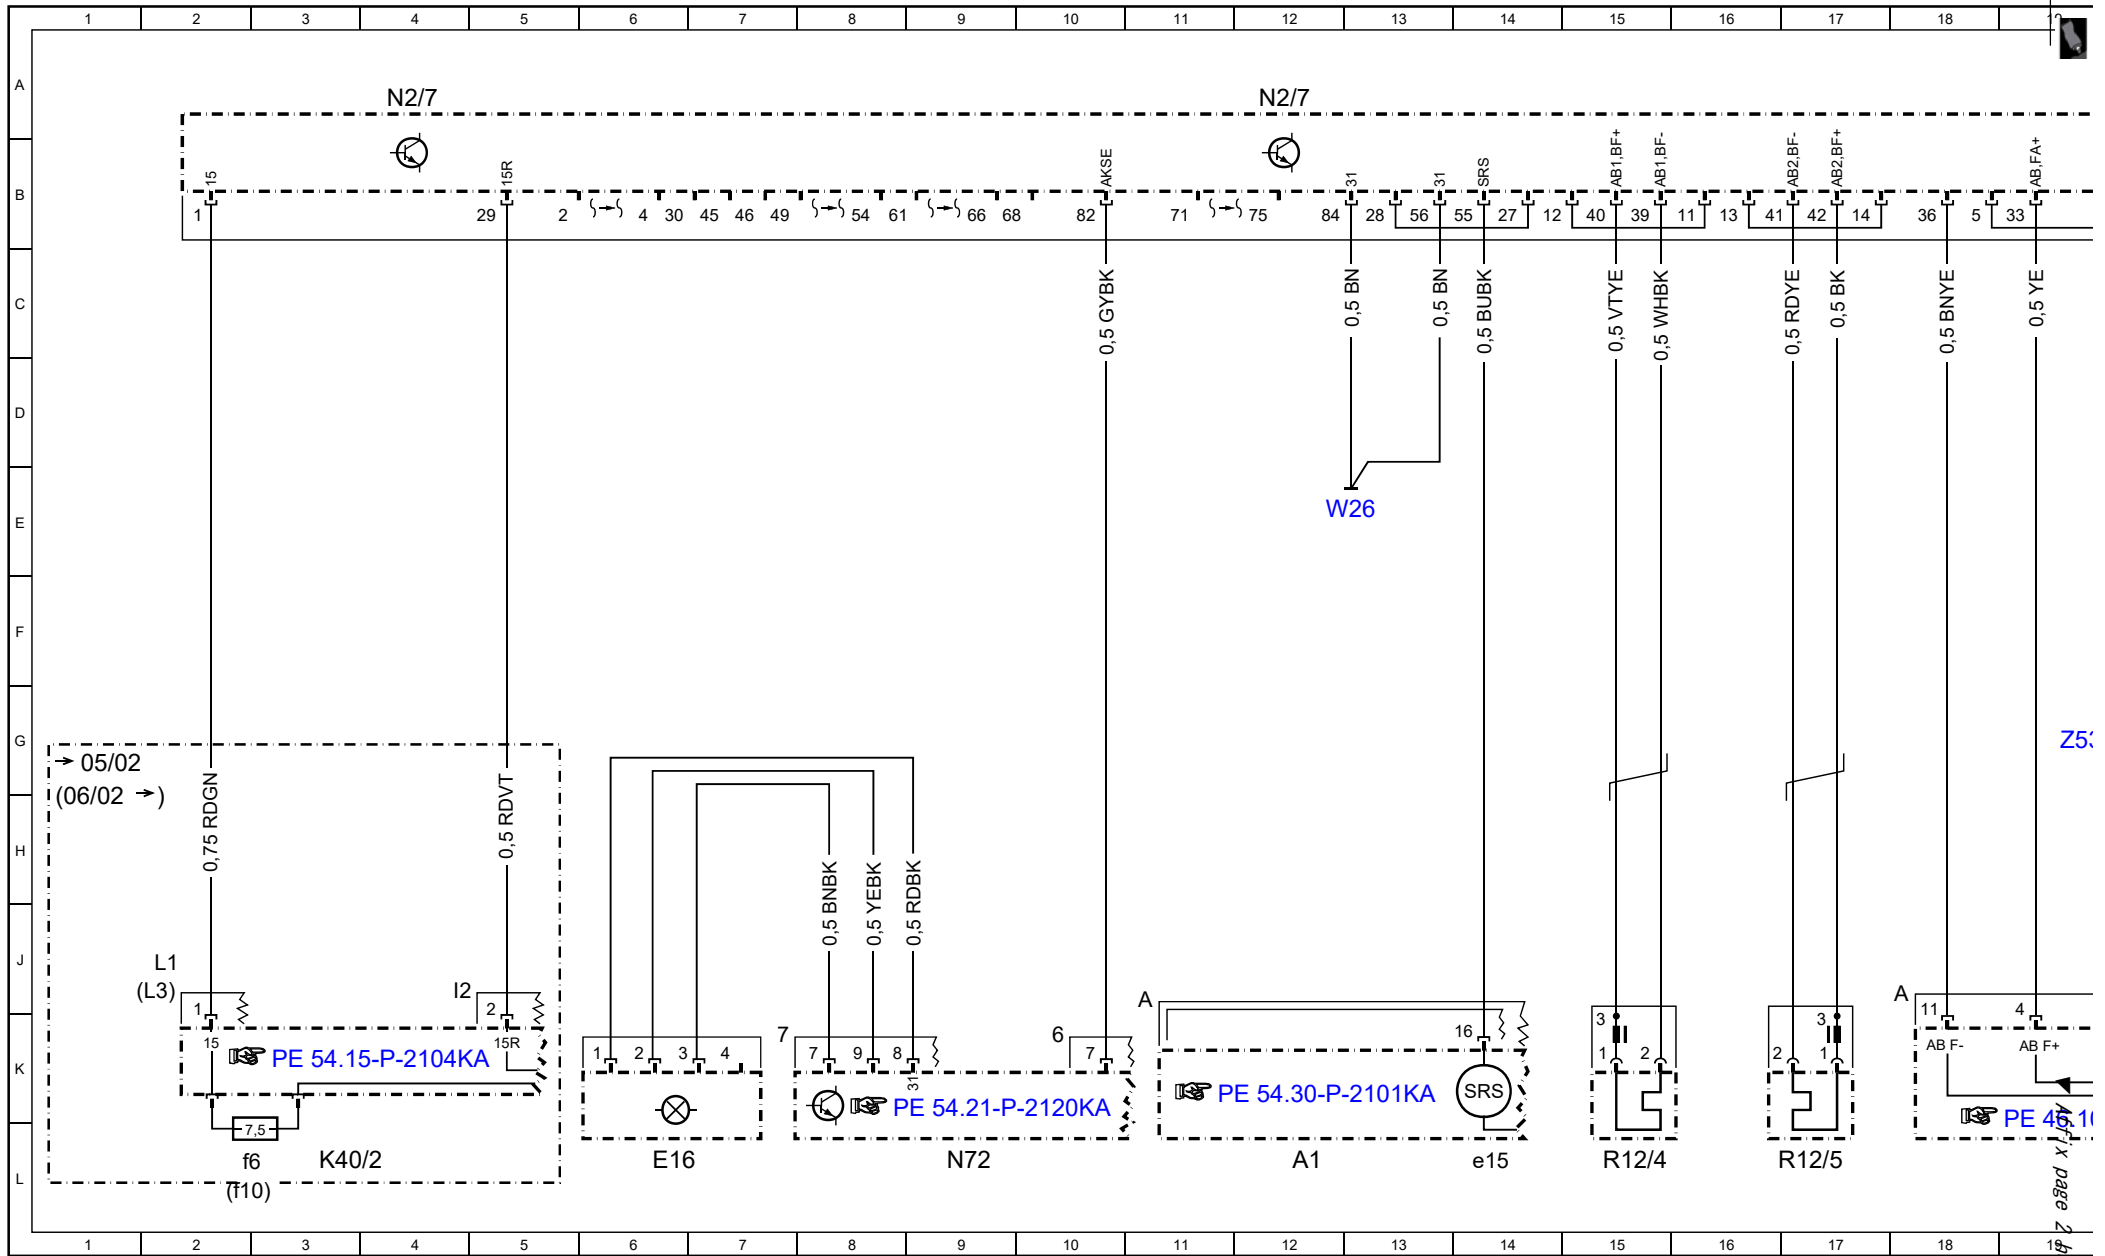

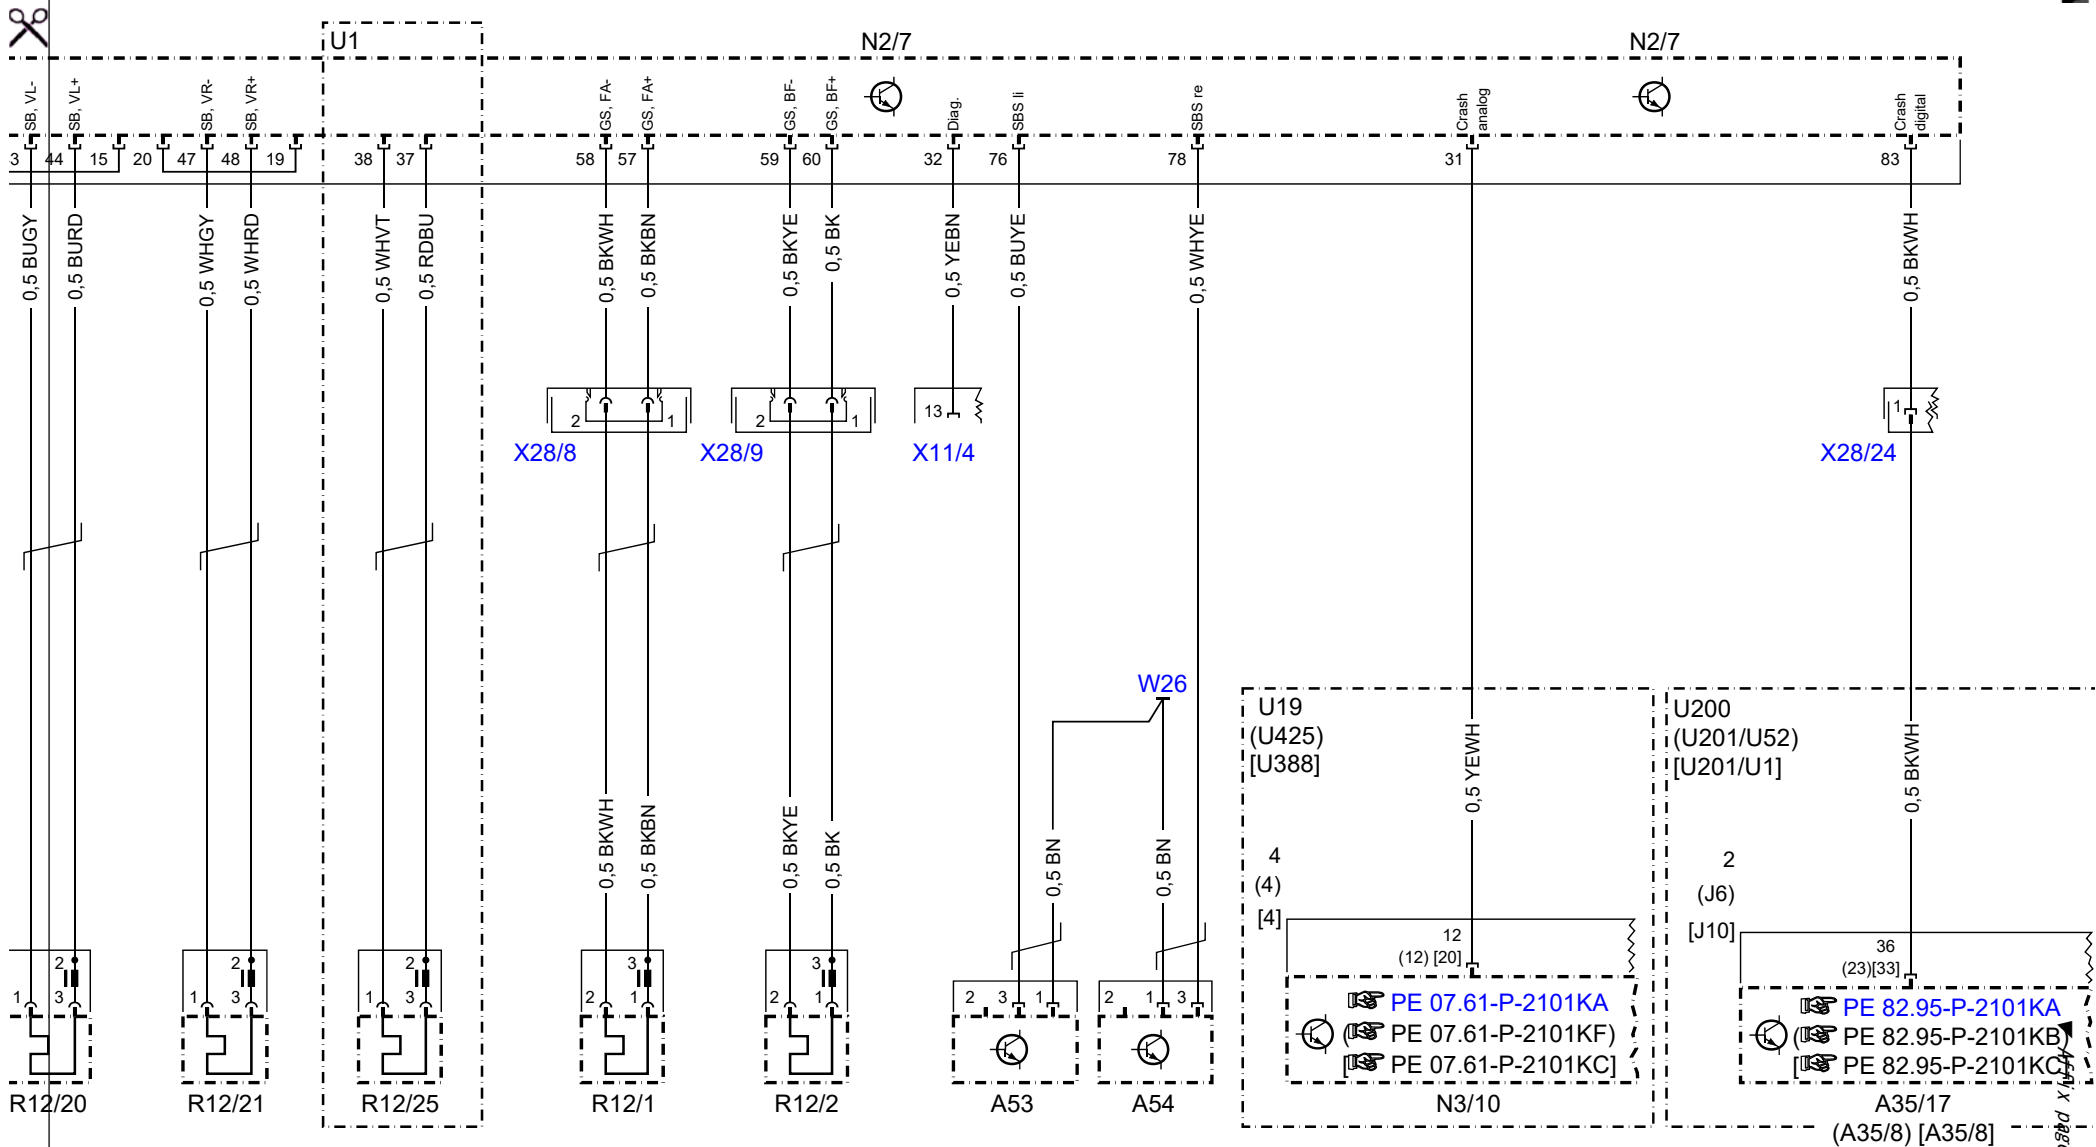

cut here

fix page here

