


K40/2 Driver-side fuse and relay module

X Direction of travel

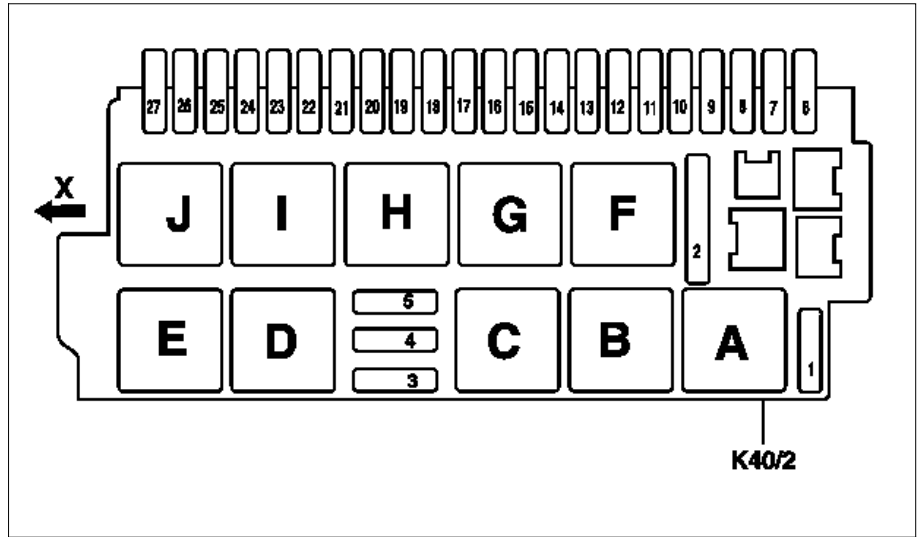

P54.15-2316-05

Fuse	Terminal	Cable ID (fused)	Fused function	Fuse rating in amperes (A)
f1	30	-	<ul style="list-style-type: none"> ● Wiper park heater relay (K40/2kA) 	20
f2	30	-	<ul style="list-style-type: none"> ● Spare 	-
f3	30	-	<ul style="list-style-type: none"> ● Relay 1, steering column tube longitudinal adjustment (K40/2kD) ● Relay 2, steering column tube longitudinal adjustment (K40/2kE) 	15
f4	30	-	<ul style="list-style-type: none"> ● Steering column height adjustment relay 1 (K40/2kI) ● Steering column height adjustment relay 2 (K40/2kJ) 	15
f5	15	-	<ul style="list-style-type: none"> ● Wiper stage 1 and 2 relay (K40/2kG) ● Wiper On and Off relay (K40/2kH) 	40
f6	15	0.75 RDGN	<ul style="list-style-type: none"> ● Restraint systems control unit (N2/7) 	7.5
f7	15	RDGN 1.5	<ul style="list-style-type: none"> ● Rear fuse and relay module (K40/5) 	5
f8	30	0.75 RD	<ul style="list-style-type: none"> ● Central gateway control unit (N93) 	10
f9	30	2.5 PKWH	<ul style="list-style-type: none"> ● Left door control unit (N69/1) 	40
f10	15R	-	<ul style="list-style-type: none"> ● Spare 	-
f11	15R	4.0 BKYE	<ul style="list-style-type: none"> ● Circuit 15R/30 cutoff relay (K75) 	30
f12	15R	0.75 BKPK 0.5 BKPK	<ul style="list-style-type: none"> ● Restraint systems control unit (N2/7) Valid for code (494) USA version: ● Weight Sensing System (WSS) control unit (N110) 	7.5
f13	30	0.5 RDWH	<ul style="list-style-type: none"> ● Stop light switch (S9/1) 	5
f14	15R	BKGN 0.75	<ul style="list-style-type: none"> ● Windshield washer fluid pump (M5/1) 	7.5
f15	30	RDGN 1.0	<ul style="list-style-type: none"> ● Compact wiring harness and diagnosis module 2, cockpit, separation point (X35/66) 	10
f16	15R	1.0 VTYE	<ul style="list-style-type: none"> ● Circuit 15R/58d connector (X39/29) 	5
f17	15R	0.5 RDYE	<ul style="list-style-type: none"> ● Vehicle-sensitive seat belt lock sensor (A60) 	5
f18	15R	-	<ul style="list-style-type: none"> ● Spare 	-
f19	15	0.75 PKRD	<ul style="list-style-type: none"> Valid for engine 156, 273: ● ME-SFI [ME] control unit (/)N3/10 	10
f20	15	BKGN 0.75	<ul style="list-style-type: none"> ● Compact wiring harness and diagnosis module 2, cockpit, separation point (X35/66) 	7.5
f21	15R	0.5 BKYE	<ul style="list-style-type: none"> ● Instrument cluster (A1) 	5
f22	30	0.5 RDYE	<ul style="list-style-type: none"> ● Instrument cluster (A1) 	5
f23	30	1.0 RDWH 0.75 RDWH	<ul style="list-style-type: none"> ● AAC [KLA] control and operating unit (N22) ● Module box separation point (X35/15) 	10
f24	30	1.5 RDBN	<ul style="list-style-type: none"> Valid for code (487) Active Body Control (ABC): ● ABC control unit (N51/2) 	15
f25	30	0.75 RDYE	<ul style="list-style-type: none"> ● Alarm horn (H3) 	7.5
f26	30	0.5 RDBU	<ul style="list-style-type: none"> ● Lower control panel control unit (N72) 	5
f27	30	2.5 RDVT	<ul style="list-style-type: none"> ● Left front seat adjustment control unit with memory (N32/1) 	30