


**Model 231**  
up to model year 2017

Overview of fuse assignments, without code B03 (ECO start/stop function)

1 Jump-starting point  
F32 Front electrical prefuse box

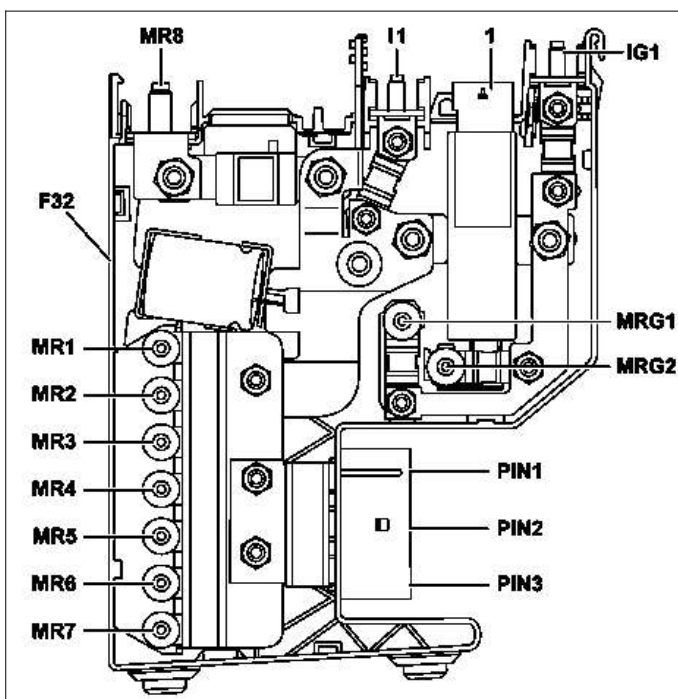


P54.15-3383-12

Fuse	Connector - designation	Clamping device	Line ID (line fused)	Fused function	Rating in amperes (A)
f150	MR8	30	35.0 RD	Firewall through-connection (F52/1)	350
f151	MR1	30	10.0 RD	<b>With engine 276:</b> Fan motor (M4/7)	100
			12.0 RD	<b>With engine 278, 157, 279:</b> Fan motor (M4/7)	
f152	MR2	30	16.0 RD	Front SAM control unit with fuse and relay module (N10/1)	150
f153	MR3	30	6.0 RD	Rear SAM control unit with fuse and relay module (N10/2)	200
f154	MR4	30	10.0 RD	Vehicle interior fuse box (F34)	80
f155	MR5	30	-	Spare	-
f156	MR6	30	-	Spare	-
f157	MR7	30	12.0 RD	Electrical power steering control unit (N68)	100
f158	PIN1	-	-	Spare	-
f159	PIN2	30	4.0 RD	Blower regulator (A32n1)	40
f160	PIN3	30	-	Spare	-
f161	MRG1	30g	-	Spare	-
f162	MRG2	30g	-	Spare	-
f163	IG1	30g	25.0 RD	Rear SAM control unit with fuse and relay module (N10/2)	200
f164	I1	30	-	Spare	-

Overview of fuse assignments, with code B03 (ECO start/stop function)

- 1 Jump-starting point  
 F32 Front electrical prefuse box

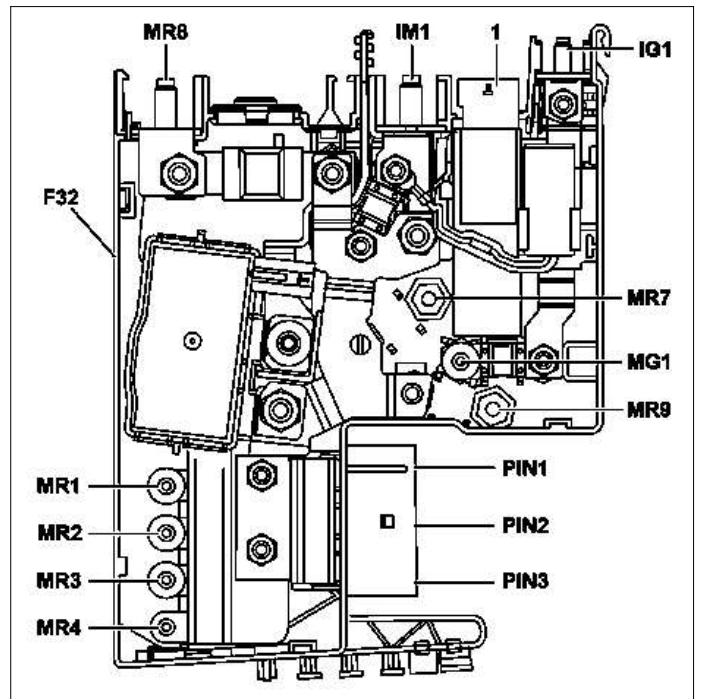

P54.15-3384-12

Fuse	Connector - designation	Clamping device	Line ID (line fused)	Fused function	Rating in amperes (A)
f150	MR8	30	35.0 RD	Firewall through-connection (F52/1)	150
f151	MR1	30	10.0 RD	<b>With engine 276:</b> Fan motor (M4/7)	100
			12.0 RD	<b>With engine 278, 157, 279:</b> Fan motor (M4/7)	
f152	MR2	30	16.0 RD	Front SAM control unit with fuse and relay module (N10/1)	150
f153	MR3	30	6.0 RD	Rear SAM control unit with fuse and relay module (N10/2)	60
f154	MR4	30	10.0 BK	Vehicle interior fuse box (F34)	80
f155	MR9	30	10.0 BK	Front SAM control unit with fuse and relay module (N10/1)	100
f156	MG1	30	12.0 RD	Front SAM control unit with fuse and relay module (N10/1)	100
f157	MR7	30	12.0 RD	Electrical power steering control unit (N68)	100
f158	IG1	30g	16.0 RD	Rear SAM control unit with fuse and relay module (N10/2)	150
f159	IM1	30	25.0 BK	Additional battery relay for ECO start/stop function (K114)	200
f160	PIN1	30	-	Spare	50
f161	PIN2	30	4.0 RD	Blower regulator (A32n1)	40
f162	PIN3	30	-	Spare	60