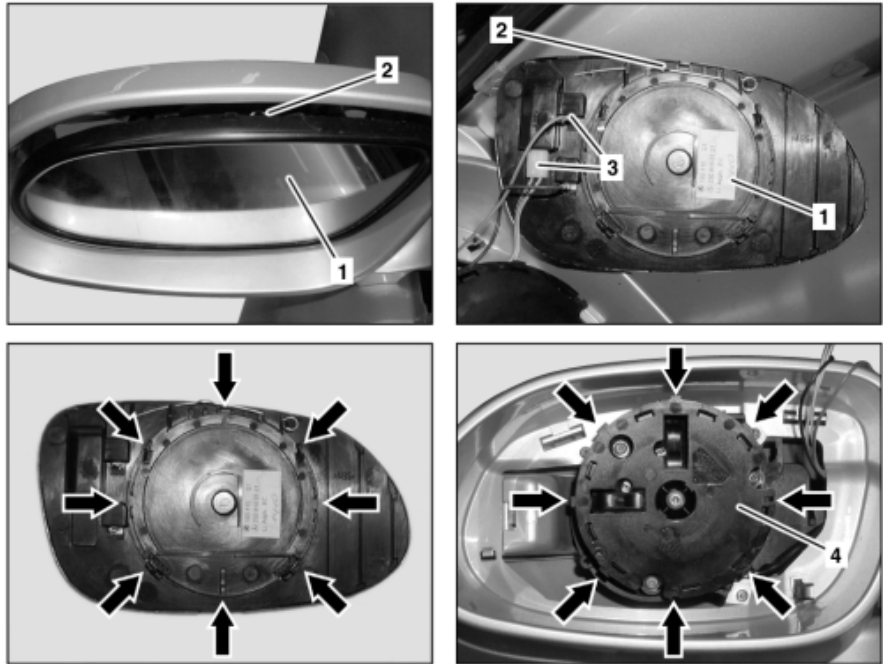


AR88.70-P-9020R	Remove/install mirror lens	21.12.05
-----------------	----------------------------	----------






MODEL 211

Shown on model 230

- 1 Mirror lens
- 2 Retaining spring
- 3 Electrical connectors
- 4 Glass adjustment drive



P88.70-2121-06

	Remove/install		
 Danger!	Risk of injury. Skin, eye and respiratory system irritation may occur through contact or inhalation of substances contained in the mirror lens.	Wear protective gloves and safety glasses.	AS60.00-Z-0008-01R
1.1	Disconnect battery ground line		
1.2	Switch off ignition and remove transmitter key from EIS control unit	With model 211	
		 On vehicles with code (889) Keyless Go, press Keyless Go start/stop button repeatedly until ignition is switched off. Remove Keyless Go transmitter card or transmitter key from vehicle and store beyond reach of transmitter (min. 2 m).	
2	Tilt out mirror lens (1) upward		
3	Press retaining spring (2) upward with suitable screwdriver and press mirror lens (1) away from glass adjustment drive (4) with mounting wedge.		110 589 03 59 00
		 Installation: Clip mirror lens (1) into glass adjustment drive (4) from bottom upward. Thereby observe retaining spring (2) and arrests (arrows) on mirror lens (1) and glass adjustment drive (4).	
4	Disconnect electrical connectors (3) and remove mirror lens (1)		
5	Install in the reverse order		



110 589 03 59 00

Mounting wedge