

MODEL 221.0 /1 up to 31.5.09

except CODE (800) Model year 2010

with CODE (390) Linguatronic - British English

with CODE (391) Linguatronic - French

with CODE (392) Linguatronic - Swiss German


with CODE (393) Linguatronic - Italian

with CODE (394) Linguatronic - Spanish

with CODE (395) Linguatronic - Dutch

with CODE (396) Linguatronic - English (US)

with CODE (813) Voice control system (VCS [SBS])

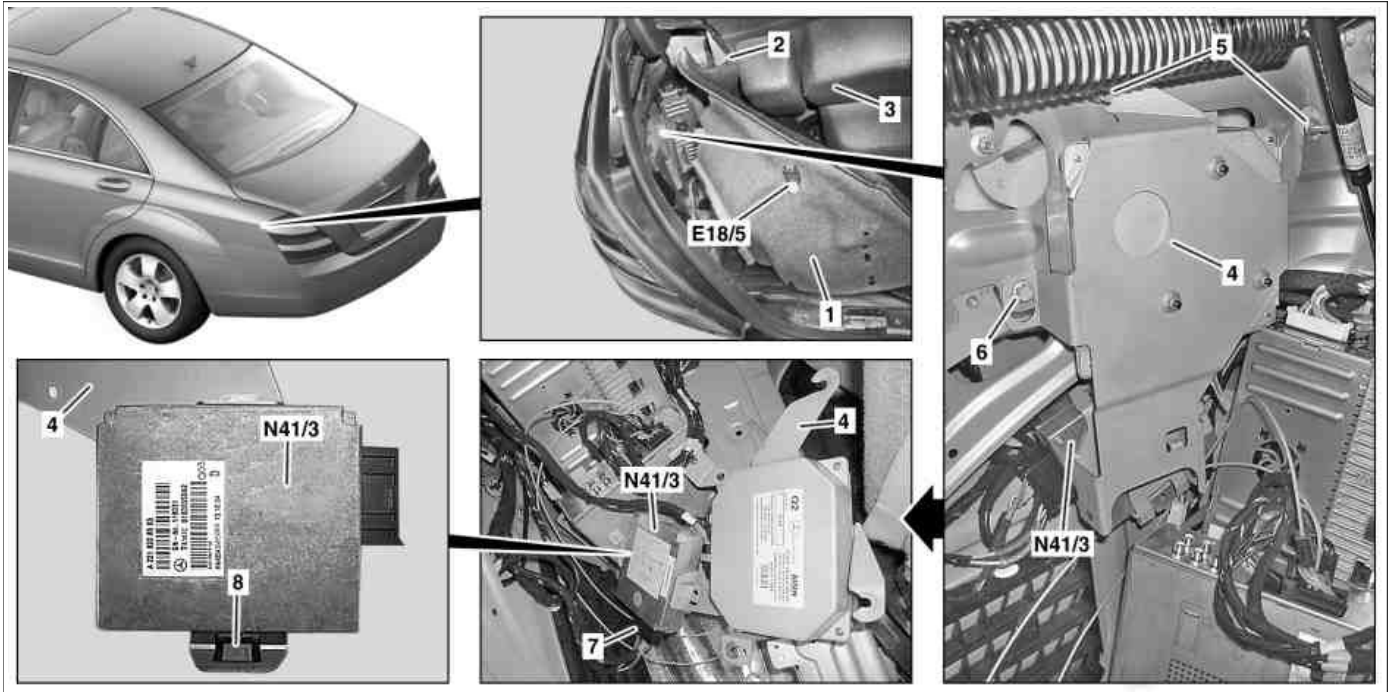

P82.70-5869-09

- 1 Side trunk paneling
2 Hinge lever passage frame
3 Trunk floor paneling
4 Bracket

- 5 Nuts
6 Bolt
7 Electrical connector
8 Lug

- E18/5 Left luggage compartment lamp
N41/3 Voice control system (VCS [SBS]) control unit

⊗ ⊗	Remove/install		
ⓘ	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1.1	Temporarily store basic data of voice control system (VCS [SBS]) control unit (N41/3) in STAR DIAGNOSIS	When replacing the voice control system (VCS [SBS]) control unit (N41/3).	
ⓘ AD	Connect STAR DIAGNOSIS and read out fault memory	<p>i Installation: Copy temporarily stored basic data to the new voice control system (VCS [SBS]) control unit (N41/3).</p>	AD00.00-P-2000-04A
2	Switch off ignition and withdraw transmitter key or Keyless Go start/stop button from the EIS [EZS] control unit	<p>i Keyless Go start/stop button only for vehicles with code (889) Keyless Go.</p>	
3	Detach side trunk paneling (1) and swivel to the side until the voice control system (VCS [SBS]) control unit (N41/3) is accessible	<p>⊗ Do not bend the hinge arm passage frame (2) otherwise the plastic will become discolored.</p> <p>Vehicles without code (Z07) Top protection Vehicles with code (Z07) Top protection</p>	<p>AR68.30-P-4600SX AR68.30-P-4600SXS</p>
4	Detach nuts (5) and bolts (6), remove bracket (4) and place to one side		
5	Disconnect electrical connector (7)		
6	Bend up fishplate (8) using a suitable tool		
7	Remove voice control system (VCS [SBS]) control unit (N41/3) from bracket (4)		
8	Install in the reverse order		