AP35.00-P-3501CMG Rear axle - oil change 19.02.2018

Model 172, 205, 212, 213, 218, 219, 231, 253

with code 471 (Manual locking differential)

Model

with code 471 (Manual locking differential) except code B25 (AMG Track Package)

Model 205, 253

with code 467 (Electronic locking differential)


Model 230

with code 471 (Manual locking differential)

except code P99 (Special model "AMG Black Series")

Shown on model 204 with code 471 (Mechanical locking differential) except code B25 (AMG Track Package)

- Rear axle gear
- Drain screw 1a
- 1e Filling screw

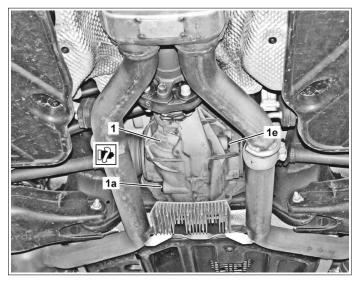

P35.31-2223-11

| ⚠ Warning | Risk of injury . Skin or eye injuries may result when handling hot or glowing objects. | Wear protective gloves, protective clothing and safety glasses, if necessary. | AS00.00-Z-0002-01A |
|-------------|---|---|---------------------|
| | Risk of death caused by vehicle slipping or toppling off of the lifting platform. | Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer. | AS00.00-Z-0010-01A |
| ⚠ Caution | Risk of injury to skin and eyes due to handling of transmission oil. Health risk caused by swallowing transmission oil | Wear protective gloves, protective clothing and safety glasses. Do not pour transmission oil into beverage bottles. | AS00.40-Z-0001-01A |
| | Preparatory activity | | |
| 1 | Lift vehicle on vehicle lift | Model 172, 204, 205, 212, 213, 218, 219, 230, 231, 253 | |
| ₽ AR | | Model 172 | AR00.60-P-1000V |
| ≆ AR | | Model 205, 213, 253 | AR00.60-P-1002LWG |
| ≆AR | | Model 219, 231 | AR00.60-P-1000TX |
| | | Park vehicle on a horizontal surface. Otherwise, the rear-axle differential (1) will not be filled correctly and an incorrect oil filling | |
| | | capacity can lead to leakage and damage. | |
| <u> </u> | Clean | | |
| 2 | Clean area surrounding drain screw (1a) and filler plug (1e) | | |
| 54 | Remove | | |
| 3 | Remove filling screw (1e) | | |
| | Draining | | |
| 4 | Remove drain screw (1a) and drain oil from rear axle differential (1) | | |
| r P | Clean | | |
| 5 | Clean drain screw (1a) and drain hole in rear axle differential (1) | Loctite 7063 cleaning spray (150 ml) | *BR00.45-Z-1046-04A |
| 4 | Check | | |

| 0 | Charle during a grow (4 a) for me wealthing | | |
|--------------------|---|---|---------------------|
| 6 | Check drain screw (1a) for re-usability | Replace damaged drain screw (1a). | |
| | | Otherwise, this may lead to leakage and | |
| | | consequential damage. | |
| X | Install | | |
| 7 | Apply a drop of sealant to start of lower thread on drain plug (1a), then immediately install drain plug (1a) and tighten | Mm Model 172, 204, 205, 212, 213, 218, 231, 253Drain screw to rear axle differential | *BA35.31-P-1003-02H |
| | | Mm Model 2190il drain screw, differential | *BA35.31-P-1003-02D |
| | | Model 2300il drain screw for rear axle differential | *BA35.31-P-1003-02A |
| | | Sealant, Omnifit 100H (50 g) | *BR00.45-Z-1061-01A |
| | Filling | | |
| 8 | Add oil to rear axle differential (1) up to lower | (1) | |
| | edge of filler hole | Only approved oils as per "SAE 75W-140 Limited Slip" may be used. Damage can otherwise occur. | |
| | | Model 172, 204, 212, 218, 231Filling capacity | *BF35.31-P-1001-01T |
| | | Model 205Filling capacity for rear axle differential with differential lock | *BF35.31-P-1003-01U |
| | | Model 213Filling capacity for rear axle differential with differential lock | *BF35.31-P-1003-02C |
| | | Model 219Filling capacity | *BF35.31-P-1003-01P |
| | | Model 230Filling capacity | *BF35.31-P-1004-01L |
| | | Model 253Filling capacity for rear axle differential with differential lock | *BF35.31-P-1003-02B |
| 1 | Clean | | |
| 9 | Clean filling hole in rear axle differential (1) | Loctite 7063 cleaning spray (150 ml) | *BR00.45-Z-1046-04A |
| 4 | Check | | |
| 10 | Check filling screw (1e) for re-usability | (1) | |
| | | Replace damaged filling screw (1e). Otherwise, this may lead to leakage and | |
| 1 | Install | consequential damage. | |
| 汉 11 | Apply a drop of sealant to start of lower thread | Nm | *BA35.31-P-1002-02H |
| | on filling screw (1) then immediately install filling screw (1) and tighten | Mm Model 172, 204, 205, 212, 213, 218, 231, 253Oil filler screw of rear axle differential | BA33.31-F-1002-02H |
| | | Mm Model 2190il filler screw, differential | *BA35.31-P-1002-02D |
| | | Nm Model 2300il filler screw, differential | *BA35.31-P-1002-02A |
| | | Sealant, Omnifit 100H (50 g) | *BR00.45-Z-1061-01A |
| | Finishing activity | | |
| 12 | Lower vehicle with lifting platform | Model 172, 204, 205, 212, 213, 218, 219, 230, 231, 253 | |
| ⊯ AR | | Model 172 | AR00.60-P-1000V |
| i≆ AR | | Model 205, 213, 253 | AR00.60-P-1002LWG |
| ₽ AR | | Model 219, 231 | AR00.60-P-1000TX |

Nm Rear axle differential housing

| Number | Designation | | MODEL 230 except CODE P99 |
|--------------------|--------------------------------|----|------------------------------|
| BA35.31-P-1002-02A | Oil filler screw, differential | Nm | 50 |

Nm Rear axle differential housing

| Number Designation N | | MODEL 219 | |
|----------------------|--------------------------------|-----------|----|
| BA35.31-P-1002-02D | Oil filler screw, differential | Nm | 50 |

Nm Rear axle differential housing

| Number | Designation | Model 172 | Model 204 |
|--------|-------------|-----------|---|
| | | | except code 700 (Technology Local Content China) except code P98 |
| | | | (Black Series) |

| BA35.31-P-1002-02H | Oil filler screw of rear axle differential | Nm | 50 | 50 |
|--------------------|--|----|----|----|

Nm Rear axle differential housing

| Number | Designation | | Model 204 with code P98 (Black Series) | Model 205 |
|--------------------|--|----|--|-----------|
| BA35.31-P-1002-02H | Oil filler screw of rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| Number | Designation | | Model 212.0/2 Model 212.1 except code 700 (Technology Local Content China) | Model 213 |
|--------------------|--|----|--|-----------|
| BA35.31-P-1002-02H | Oil filler screw of rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| Number | Designation | | Model 218 | Model 231 |
|--------------------|--|----|-----------|-----------|
| BA35.31-P-1002-02H | Oil filler screw of rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| Number | Designation | | Model 253 |
|--------------------|--|----|-----------|
| BA35.31-P-1002-02H | Oil filler screw of rear axle differential | Nm | 50 |

Nm Rear axle differential housing

| Number | Designation | | MODEL 230 except CODE P99 |
|--------------------|---|---|------------------------------|
| BA35.31-P-1003-02A | Oil drain screw for rear axle differential Nr | m | 50 |

Nm Rear axle differential housing

| Number | Designation | | MODEL 219 |
|--------------------|-------------------------------|----|-----------|
| BA35.31-P-1003-02D | Oil drain screw, differential | Nm | 50 |

Nm Rear axle differential housing

| Number | Designation | | | Model 204 except code 700 (Technology Local Content China) except code P98 (Black Series) |
|--------------------|---------------------------------------|----|----|---|
| BA35.31-P-1003-02H | Drain screw to rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| Number | Designation | | Model 204 with code P98 (Black Series) | Model 205 |
|--------------------|---------------------------------------|----|--|-----------|
| BA35.31-P-1003-02H | Drain screw to rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| L | Number | Designation | Model 212.0/2 Model 212.1 except code 700 (Technology Local Content China) | Model 213 |
|---|--------------------|--|--|-----------|
| E | BA35.31-P-1003-02H | Drain screw to rear axle differential Nm | 50 | 50 |

Nm Rear axle differential housing

| Number | Designation | | Model 218 | Model 231 |
|--------------------|---------------------------------------|----|-----------|-----------|
| BA35.31-P-1003-02H | Drain screw to rear axle differential | Nm | 50 | 50 |

Nm Rear axle differential housing

| Number Designation | | Model 253 | |
|--------------------|---------------------------------------|-----------|----|
| BA35.31-P-1003-02H | Drain screw to rear axle differential | Nm | 50 |

Rear axle gear

| Number | Designation | | Model 172.475 | MODEL 204.077/277, MODEL 204.377 except CODE B25/ P98 |
|--------------------|------------------|--|--------------------|---|
| BF35.31-P-1001-01T | Filling capacity | Rear axle differential Liter 183 FE, Ø 183 mm | - | - |
| | | Sheet | - | - |
| | | Rear axle differential Liter 187 FE, Ø 187 mm | - | - |
| | | Sheet | - | - |
| | | Rear axle differential Liter 200 FE, Ø 200 mm | - | - |
| | | Sheet | - | - |
| | | Rear axle differential 215 FE, Ø 215 mm | 1,2 | 1,2 |
| | | Sheet | BB00.40-P-0235-61A | BB00.40-P-0235-61 A |

Rear axle gear

| Number | Designation | | MODEL 204.377 with CODE P98, except CODEB25 | Model 212.074/075/076/07 7/092/274/275/276/2 77/292 |
|--------------------|------------------|---|---|--|
| BF35.31-P-1001-01T | Filling capacity | Rear axle differential Liter | - | - |
| | | 183 FE, Ø 183 mm | | |
| | | Sheet | - | - |
| | | Rear axle differential Liter | - | - |
| | | 187 FE, Ø 187 mm | | |
| | | Sheet | - | - |
| | | Rear axle differential Liter 200 FE, Ø 200 mm | - | - |
| | | Sheet | - | - |
| | | Rear axle differential 215 FE, Ø 215 mm | 1,2 | 1,2 |
| | | Sheet | BB00.40-P-0235-61A | BB00.40-P-0235-61 A |

Rear axle gear

| Number | Designation | | Model 218 AMG | Model 231 AMG |
|--------------------|------------------|--|---------------|---------------|
| BF35.31-P-1001-01T | Filling capacity | Rear axle differential Liter 183 FE, Ø 183 mm | - | - |
| | | Sheet | - | - |
| | | Rear axle differential Liter 187 FE, Ø 187 mm | - | - |
| | | Sheet | - | - |

| Rear axle differential Liter - 200 FE, Ø 200 mm | | - |
|---|--------------------|------------------------|
| Sheet - | | - |
| Rear axle differential 215 FE, Ø 215 mm | ,2 | 1,2 |
| Sheet | BB00.40-P-0235-61A | BB00.40-P-0235-61 A |

Differential

| Number | Designation | | MODEL 219.376/ 377 |
|--------------------|------------------|----------------------------|------------------------|
| BF35.31-P-1003-01P | Filling capacity | Differential Ø 215 mmLiter | 1,2 |
| | | Sheet | BB00.40-P-0235-61 A |

Rear axle gear

| Number | Designation | Model 205.086/087/286/28 7/386/387/486/487 |
|--------------------|---|--|
| BF35.31-P-1003-01U | Filling capacity for rear axle differential with differential lock Liter | 1,2 |
| | Sheet | BB00.40-P-0235-61 A |

Rear axle gear

| Number | Designation | | Model 253.388/389/988/98 9 |
|--------------------|--|------|----------------------------------|
| BF35.31-P-1003-02B | Filling capacity for rear axle differential with differential lock | iter | 1,2 |
| | Sheet | | BB00.40-P-0235-61 A |

Rear axle gear

| Number | Designation | | Model 213.088/089/288/28 9 |
|--------------------|--|---|----------------------------------|
| BF35.31-P-1003-02C | Filling capacity for rear axle differential with differential lock | I | 1,2 |
| | Sheet | | BB00.40-P-0235-61 |
| | | | Α |

Differential

| Number | Designation | | MODEL 211.077/ 277, 230.470/472/474/ 479 |
|--------------------|------------------|----------------------------|---|
| BF35.31-P-1004-01L | Filling capacity | Differential Ø 215 mmLiter | 1,2 |
| | | Sheet | BB00.40-P-0235-61 A |

Repair materials

| Number | Designation | Order number |
|--------------------|--------------------------------------|--------------------|
| BR00.45-Z-1046-04A | Loctite 7063 cleaning spray (150 ml) | A 001 986 71 71 10 |
| BR00.45-Z-1061-01A | Sealant, Omnifit 100H (50 g) | A 002 989 23 71 |