


MODEL 207, 212, 218
Split floating caliper brake

- 3 Brake caliper
 4 Brake hose
 5 Brake linings
 6 Screw
 S10/2x1 Right front brake wear sensor electrical connector

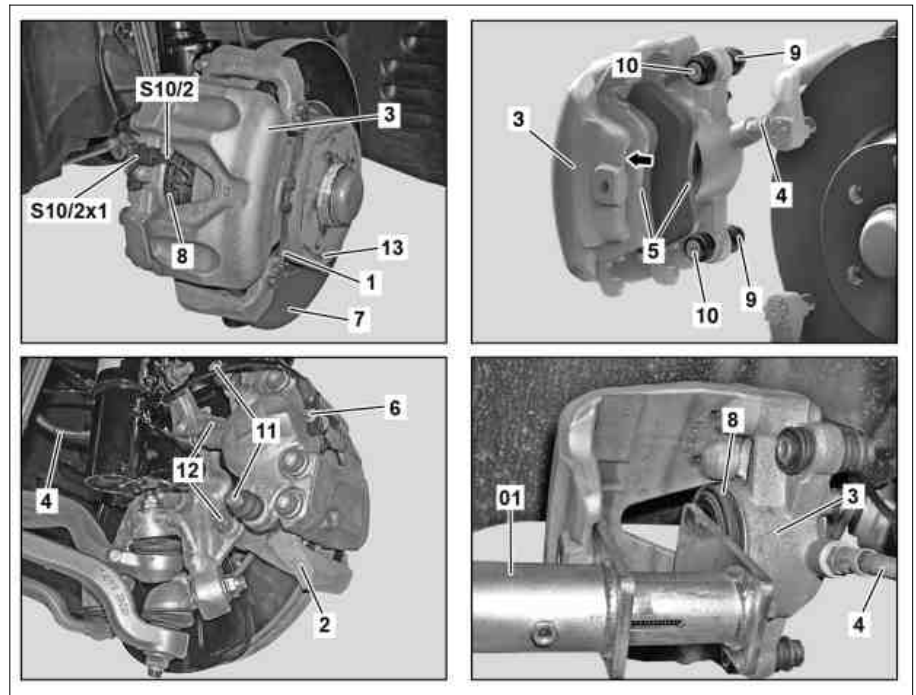

P42.10-2760-06

Danger!	Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contact with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
Danger!	Risk of accident when commissioning the vehicle due to a lack of braking effect when the service brake is operated for the first time after repair work.	Before starting the engine, actuate brake pedal several times until pressure is built up and maintained in the brake system.	AS42.50-Z-0002-01A
	Brake fluid notes		AH42.50-P-0001-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	Notes on repairs to brake system		AH42.00-P-0003-01A
	Remove/install		
1	Detach brake hose (4) from brake caliper (3)		AR42.10-P-0013EW
2	Unscrew screw/bolt (6) and remove right front brake wear sensor electrical connector (S10/2x1)	When removing brake caliper (3) on right side of vehicle. 	*BA42.10-P-1002-10J
		MODEL 207 Split floating caliper brake MODEL 212 (except 212.061/074/075/076/077/092/274/275/276/277/292) Split floating caliper brake MODEL 218 (except 218.374/375/376/392/974/975/976/992) Split floating caliper brake	
3	Remove brake linings (5)		AR42.10-P-1610EWC
4	Unscrew brake caliper (3) from brake hose (4)	Installation: Do not yet tighten the brake hose.	AR42.10-P-0013EW
5	Install in the reverse order		
6	Bleed brake system		AR42.10-P-0010EW

Front axle brake caliper

Number	Designation		MODEL 207	MODEL 212 (except 212.061/074/075/076/077/092/274/275/276/277/292)
BA42.10-P-1002-10J	Bolt, brake wear sensor to brake caliper	Nm	8	8

Nm Front axle brake caliper

Number	Designation		MODEL 218 (except 218.374/375/376/392/974/975/976/992)
BA42.10-P-1002-10J	Bolt, brake wear sensor to brake caliper	Nm	8