Model 166
Model 292

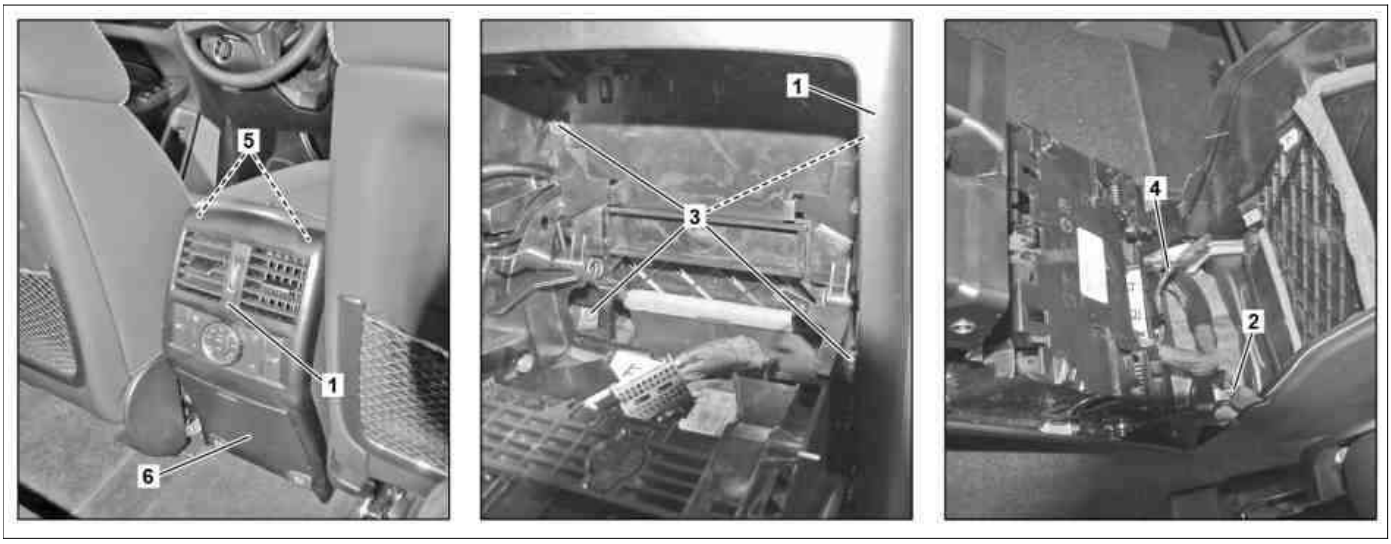

P68.20-4456-08

Shown on MODEL 166 with code 581 (Automatic air conditioning)

1 Center console
2 Electrical line
3 Bolts
4 Electrical line
5 Supports
6 Flap

Shown on MODEL 166 without code 864 (Rear entertainment system)

1 Center console
3 Bolts
6 Flap
7 Rubber support

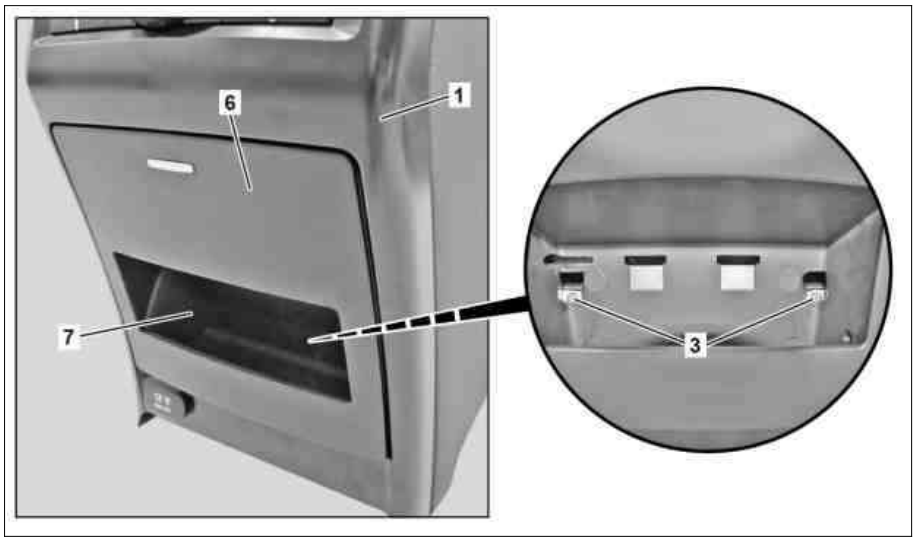

P68.20-4459-05

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Completely move front seats toward front		
2	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
3.1	Remove rubbers support (7)	Model 166 except code 864 (Rear compartment entertainment package) Model 292 except code 864 (Rear compartment entertainment package)	

3.2	Remove DVD player	Model 166 with code 864 (Rear compartment entertainment package) Model 292 with code 864 (Rear compartment entertainment package)	AR82.60-P-7505GQ
4	Unscrew bolts (3) at bottom of center console (1)		
5	Open flap (6)	Model 166 except code 864 (Rear compartment entertainment package) Model 292 except code 864 (Rear compartment entertainment package)	
6	For this purpose press flap (6) beyond stop point on center console (1) and unclip	Model 166 except code 864 (Rear compartment entertainment package) Model 292 except code 864 (Rear compartment entertainment package)	
7	Unscrew bolts (3) at bottom of center console (1)		
8	Unclip center console (1) from mounts (5)		
9	Lay center console (1) toward rear		
10	Disconnect electrical connector from RCP rear control panel in rear	Model 166 with code 581 (Automatic air conditioning) Model 292 with code 581 (Automatic air conditioning)	
11	Disconnect electrical connector on electrical line (2) from right socket	Model 166 with code 864 (Rear compartment entertainment package) Model 292 with code 864 (Rear compartment entertainment package)	
12	Unclip electrical line (4) from center console (1)		
13	Disconnect electrical connector on electrical line (4) from left socket		
14	Install in the reverse order		