
## MODELS 211.004 /006 /016 /023 /026 /028 /042 /043 /056 /061 /065 /070 /206 /216 /223 /226 /242 /243 /256 /2 61 /265 /270 1#

Voltage supply wiring harness
Stowage compartment

brown Brown wire RS Pink line red Red line

A2/6 CD changer F34 Interior fuse box W15/2 Ground (left footwell) X30/8 Wake-up signal connector

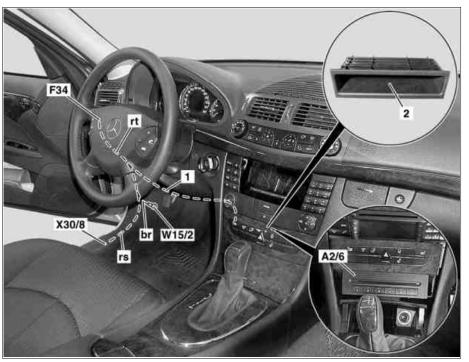

P82.64-2404-06

X	Remove		
⚠ Danger!	Risk of explosion caused by oxyhydrogen	No fire, sparks, open flames or smoking.	AS54.10-Z-0001-01A
J	gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	Wear acid-resistant gloves, clothing and safety glasses. Pour battery acid only into suitable and appropriately marked containers.	
	Disconnect battery ground cable		
<b>₽</b> AR		Model 211.0	AR54.10-P-0003T
<b>₽</b> AR		Model 211.2	AR54.10-P-0003TA
<b>!&gt;</b>	Notes on battery	All models	AH54.10-P-0001-01A
i	Notes on AGM battery		AH54.10-P-0002-01A
² ⊯AR	Remove center stowage compartment (2)	i Installation: The stowage compartment (2) is no longer required and is replaced by the CD changer (A2/6).	AR68.10-P-1620T
	Demons and in	[•].,	
3.1 <b>☞ A R</b>	Remove radio	i Vehicles with radio	AR82.60-P-7502T
3.2	Remove COMAND operating, display and control unit	i Vehicles with code (526) COMAND without (navigation).	
<b>₽</b> AR			AR82.85-P-1000T
4	Remove cover below left of instrument panel		
<b>₽</b> AR			AR68.10-P-1500T
5 FAR	Remove front floor covering (left)		AR68.20-P-2050T
6	Unclip cover from interior fuse box (F34) at driver-side		
X	Install		
7	Retrofit CD changer wiring harness		AN82.64-P-0001-01T
3	Retrofit fiber optic wiring harness		AN82.70-P-0002-01T
9	Install CD changer (A2/6)		
≆AR			AR82.64-P-7508T
10	Install remaining parts onto vehicle	i Steps 6 to 1.	
11	Carry out start-up and function test	i Carry out specified/actual configuration using STAR DIAGNOSIS Check for proper function according to operating instructions.	
		STAR DIAGNOSIS diagnosis system.	*WE58.40-Z-1013-06

12	Add special equipment to the vehicle data	i Code (819) CD-changer, 6 disk.	
	card and to the online vehicle data card		

## Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	STAR DIAGNOSIS Compact diagnosis system for passenger cars, order number 6511 1801 00
--------------------	---

## Parts ordering notes

Part no.	Designation	Quantity
KG99 (see EPC)	Scope of delivery of CD changer	1