


MODEL 211.0 /2 /6 up to 30.6.04
with CODE (275) Memory package (driver seat, steering column, mirrors)
with CODE (242) Electrically adjustable front passenger seat with memory

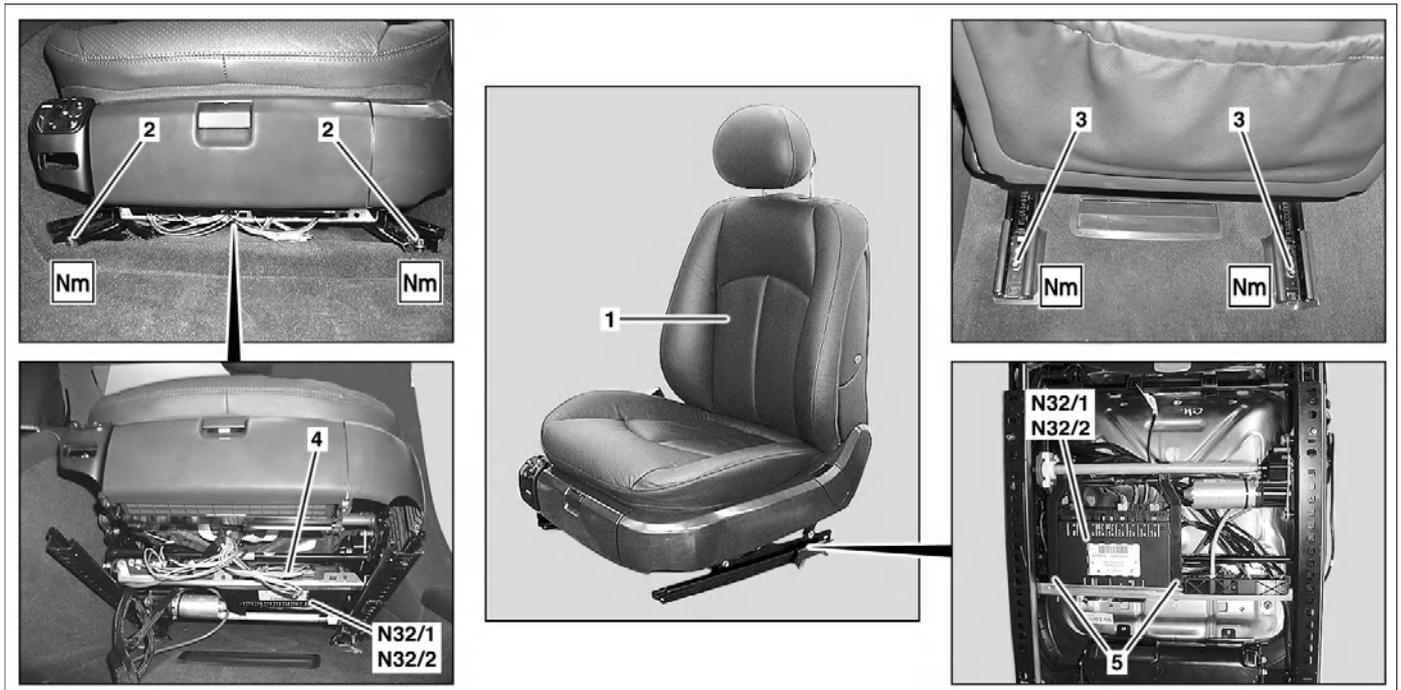

P91.29-2282-09

Shown on left front seat

1	Front seat	5	Retaining rails	N32/2	Passenger front seat adjustment control module with memory (with code (242) electrically adjustable passenger seat with memory)
2	Bolt				
3	Bolt	N32/1	Driver front seat adjustment control unit with memory		
4	Electrical connector				

Modification notes


5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

 	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Move left or right front seat (1) forwards and up		
2	Move backrest into upright position		
3	Remove caps and unscrew bolts (2)	 Installation: Replace bolts (2).  Installation: Align seat rails. 	*BA91.10-P-1007-01A
4	Move front seat (1) to rear		
5	Remove caps and unscrew bolts (3)	 Installation: Replace the bolts (3).  Installation: Align seat rails. 	*BA91.10-P-1007-01A
6	Tilt back front seat (1)		
7	Disconnect electrical connector (4) from the driver-side front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2)		
8	Release catch hooks from retaining rails (5) and guide out driver front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2)	 Observe correct installation position.	
9	Detach remaining electrical connectors from driver front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2)		

10	Remove driver front seat adjustment control unit with memory (N32/1) or passenger side front seat adjustment control unit with memory (N32/2) from vehicle		
11	Install in the reverse order		
12.1	Parameterize weight sensing system (WSS) with STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	Model 211.0/2 on front passenger seat as from 19.02.04 with code (494) USA version.   Menu item "Initial startup of weight sensors". STAR DIAGNOSIS diagnosis system	*211589003200 AD00.00-P-2000-04A *WH58.30-Z-1048-13A

 **Front seats**

Number	Designation	Model
BA91.10-P-1007-01A	Seat bolt to vehicle floor	Nm 45

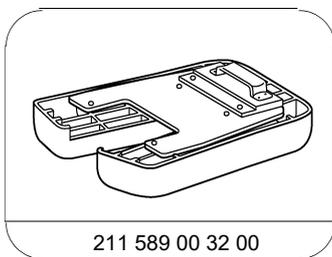

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00