Model 204.0/2

with code 242 (Front passenger seat, electrically adjustable with memory function) with code 275 (Memory Package (driver's seat, steering column and mirror))

except code 409 (Left and right front multicontour seat)

Model 204.9

with code 242 (Front passenger seat, electrically adjustable with memory function)

with code 275 (Memory Package (driver's seat, steering column and mirror))

Model 212, 218

with code 275 (Memory Package (driver's seat, steering column and mirror))

Model 463.202/236/237

as of model year 2010 up to model year 2013 except code SM7 (Left front multicontour seat)

except code SM8 (Front passenger multicontour seat)

Model 463.222/270/271/303/340/341

as of model year 2010 up to model year 2013 except code SM7 (Left front multicontour seat)

except code SM8 (Front passenger multicontour seat)

Model 463.306/336

as of model year 2010 up to model year 2013 except code SM7 (Left front multicontour seat)

except code SM8 (Front passenger multicontour seat)

Model 463.346

up to model year 2013

except code SM7 (Left front multicontour seat)

except code SM8 (Front passenger multicontour seat)

/FACELIFT 2012

Shown on model 204.981, with removed front seat with code (864) Rear entertainment system


Air cushion
 Backrest frame

3 Electrical wiring harness
 4 Electrical wiring harness
 5 Electrical connector
 6 Electrical wiring harness

7 Cable tie8 Bracket

M25/4 Driver seat lumbar support pneumatic pump


M25/5 Front passenger seat lumbar support pneumatic pump

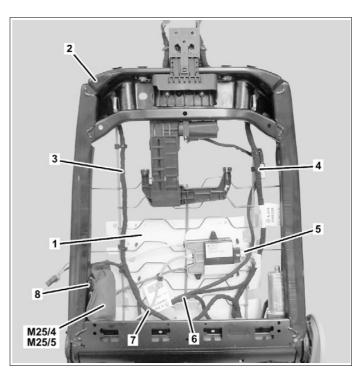

P91.25-2467-12

Shown on model 204.981, with removed front seat

- 1 Air cushion
- 2 Backrest frame
- 9 Electrical connector
- 10 Wire frame

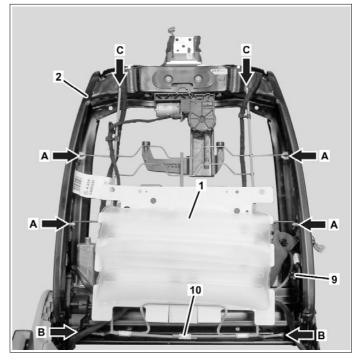

P91.25-2468-12

X	Remove/install		
.1	Remove cover at backrest		
		Model 204.9	AR91.18-P-1820CX
		with code 242 (Front passenger seat,	
		electrically adjustable with memory function)	
		with code 275 (Memory Package (driver's	
		seat, steering column and mirror))	
		with code 401 (Individual seat)	
		Model 212	
		with code 275 (Memory Package (driver's	
		seat, steering column and mirror))	
		with code 401 (Individual seat)	
		with code 409 (Left and right front	
		multicontour seat)	
		with code 432 (Left and right dynamic multicontour seat)	
		Model 218	
		with code 275 (Memory Package (driver's	
		seat, steering column and mirror))	
		with code 401 (Individual seat)	
		with code 409 (Left and right front	
		multicontour seat)	
		with code 432 (Left and right dynamic	
		multicontour seat)	
		Model 463.202/236/237	AR91.18-P-1820GP
		as of model year 2010 up to model year 2013	3
		except code SM7 (Left front multicontour	
		seat)	
		except code SM8 (Front passenger	
		multicontour seat)	
		Model 463.222/270/271/303/340/341	
		as of model year 2010 up to model year 2013	3
		except code SM7 (Left front multicontour seat)	
		except code SM8 (Front passenger	
		multicontour seat)	
		Model 463.306/336	
		as of model year 2010 up to model year 2013	3
		except code SM7 (Left front multicontour	
		seat)	
		except code SM8 (Front passenger	
		multicontour seat)	
		Model 463.346	
		as of model year 2010 up to model year 2013	3
		except code SM7 (Left front multicontour	
		seat)	
		except code SM8 (Front passenger	
		multicontour seat)/FACELIFT 2012	
		☐ Do not remove front seat.	

1.2	Remove front seat backrest padding	Model 204.077/277	
		Model 204.0/2 with code 242 (Front passenger seat, electrically adjustable with memory function) with code 275 (Memory Package (driver's seat, steering column and mirror)) except code 409 (Left and right front multicontour seat)	AR91.10-P-1095CW
2	Remove seat backrest shell from backrest frame (2)		
3	Remove protective covering from backrest frame (2)		
4	Unclip electrical wiring harnesses (3, 4) from wire frame (10)	With code (864) Rear entertainment system or code (866) Rear entertainment preinstallation	
5	Disconnect electrical connection (5)		
6	Unclip electrical wiring harness (6) from wire frame (10)		
7	Remove cable ties (7)		
8	Remove bracket (8) of driver seat lumbar support pneumatic pump (M25/4) or front passenger seat lumbar support pneumatic pump (M25/5) from backrest frame (2)		
9	Unclip and disconnect electrical connector (9) from backrest frame (2)		
10	Unhook wire frame (10) from hooks (arrows A) on backrest frame (2)	Unhook wire frame (10) carefully. Risk of breakage of the hooks (arrows A).	
11	Unhook wire frame (10) from mounting holes (arrows B) in backrest frame (2)		
12	Swivel wire frame (10) upwards and unhook from mounting holes (arrows C) in backrest frame (2)		
13	Remove wire frame (10) with air cushion (1)		
14	Install in the reverse order		