










MODEL 219.3


Shown on left door air outlet

- 1 Air outlet
 2 Cover
 3  Mounting wedge
 4  Pulling hook
 5 Electrical connector

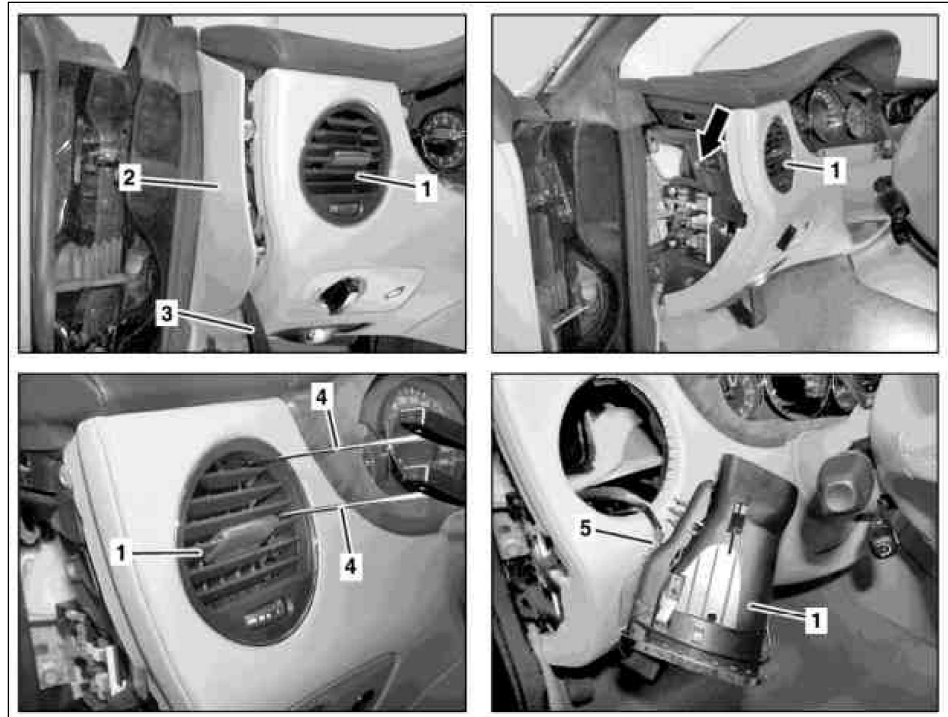


P68.10-3285-06

	Remove/Install		
1	Unclip cover (2) from instrument panel (2) with mounting wedge (3)		*110589035900
2	Pull air outlet (1) out with pulling hook (4)	 Do not damage guide (arrow) on air outlet (1).   Installation: Ensure that air outlet (1) arrests properly	*140589023300
3	Remove air outlet (1) from instrument panel until electrical connector (5) is accessible	 Installation: Guide (arrow) on air outlet (1) should engage in instrument panel	
4	Disconnect electrical connector (5) from air outlet illumination		
5	Remove air outlet (1)		
6	Install in the reverse order		

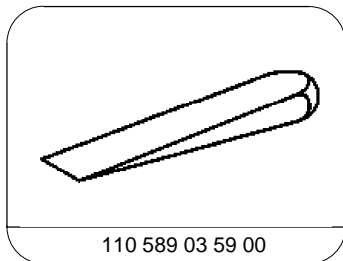

Mounting wedge

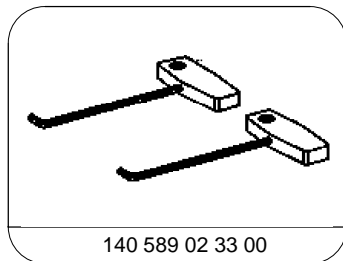

Pulling hook