




110 589 03 59 00


Mounting wedge

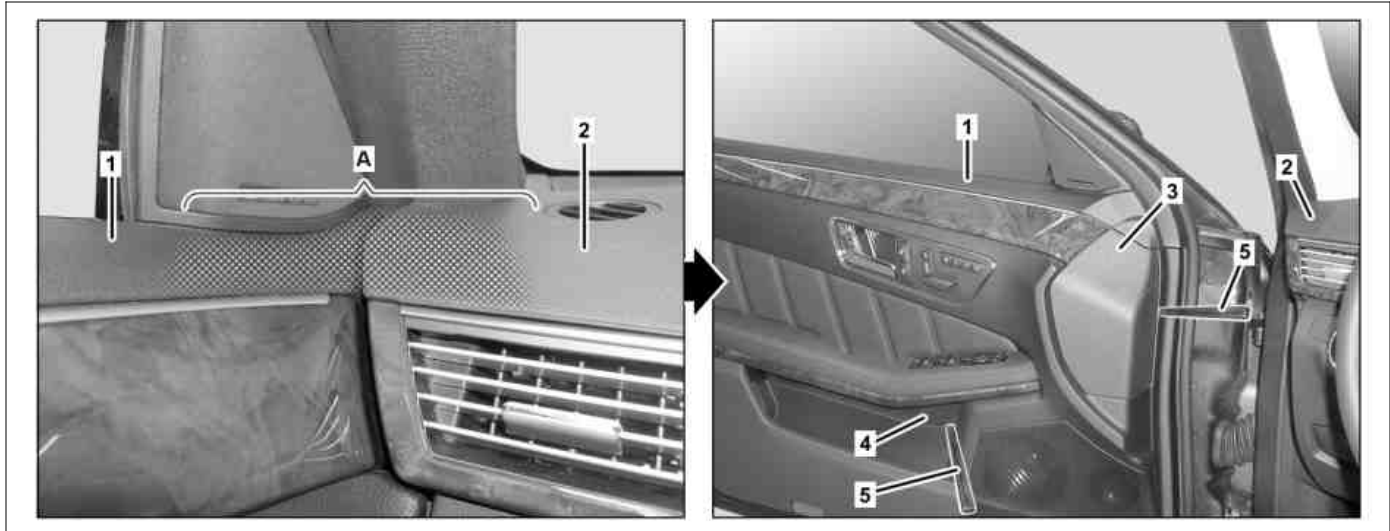

P72.10-3720-08

**i** After installing instrument panel (2) or door lining (1), it is possible to recreate the visual line in area (A) between the instrument panel (2) and the door lining (1) by slightly adjusting the height of door lining (1).  
Correction of height adjustment for door lining (1) is described in the following work description.

- 1 Open front door.
- 2 Unclip door control unit cover (3) with  assembly wedge (5) from door lining (1).
- 3 Unclip cover below armrest (4) with  assembly wedge (5) from door lining (1).

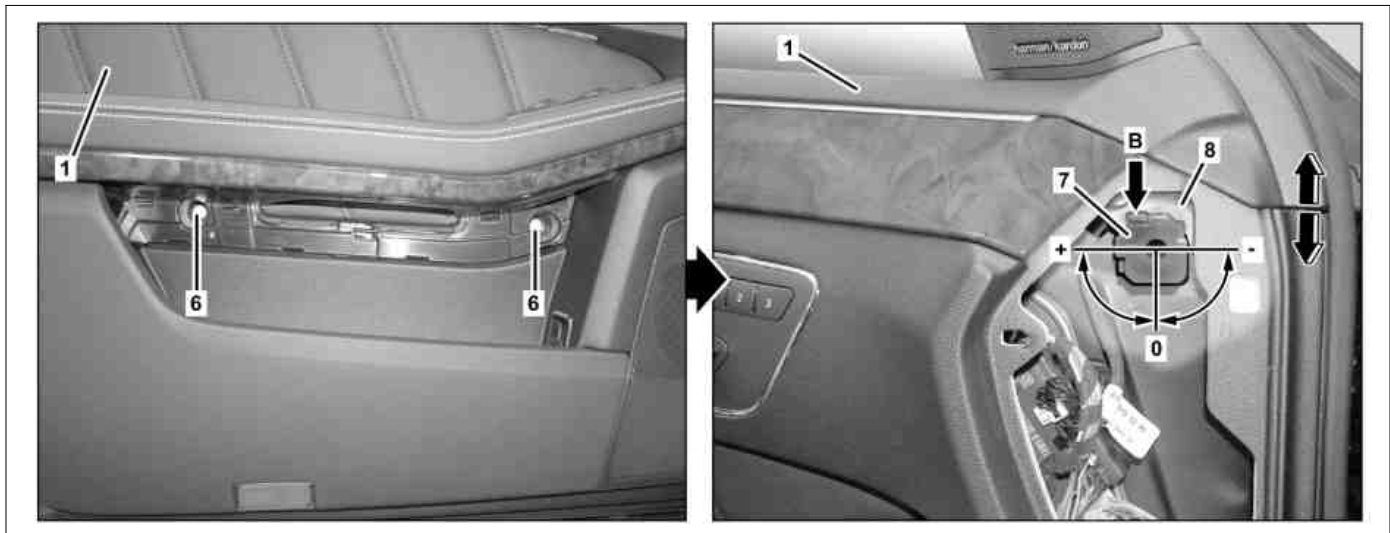

P72.10-3721-08

- 4 Unscrew bolts (6) from door lining (1).
- 5 Slightly lift lock tab (arrow B) on fastening bolt (7) and pull fastening bolt (7) out of basic carrier (8) from door lining (1).
- 8 Check height correction of door lining (1) in relation to instrument panel, if necessary repeat adjustment.

- 6 Position door lining (1) according to visual line in relation to instrument panel according to height.
- 7 Turn fastening bolt (7) to "+" or "-" according to height correction of door lining (1).

- 9 Slide fastening bolt (7) into basic carrier (8) of door lining (1) until lock tab (arrow B) arrests.
- 10 Screw in bolts (6).
- 11 Clip cover below armrest and door control unit cover into door lining (1).