
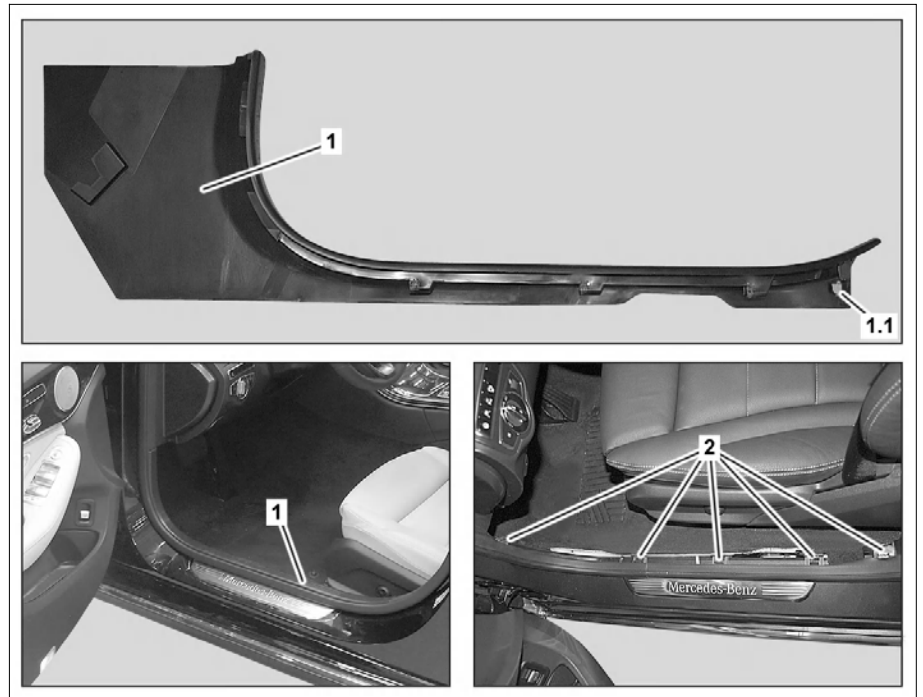


- Model 205.0/1/2
- Model 213
- Model 253
- Model 293

- 1 Front door sill molding
- 1.1 Bracket
- 2 Retaining clips

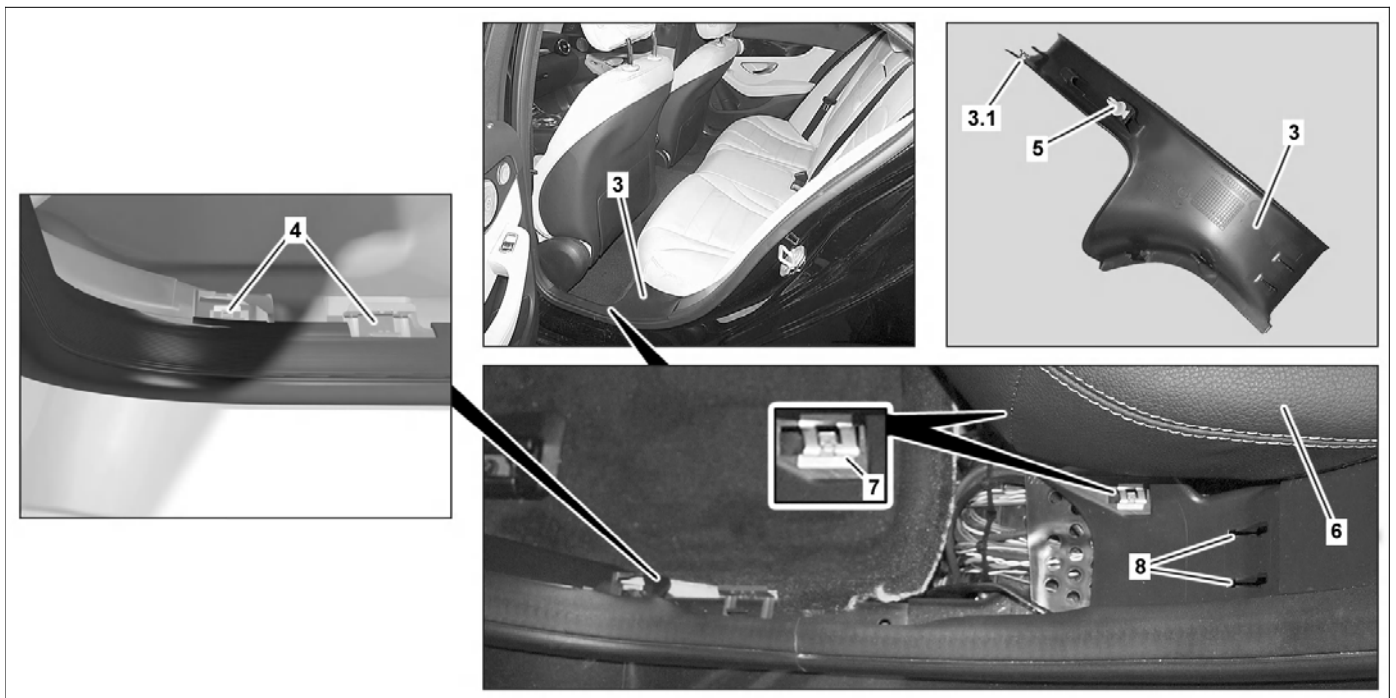

P68.30-3748-06








P68.30-3749-09

Shown on model 205.0

- | | | |
|--------------------------|---------------------------|-------------------|
| 3 Rear door sill molding | 5 Mounting clip | 7 Retaining clips |
| 3.1 Bracket | 6 Rear bench seat cushion | 8 Guides |
| 4 Retaining clips | | |


	Remove/install		
--	----------------	--	--

1	Unhook bracket (1.1) from front door sill (1) at bottom of B-pillar paneling	Only when removing front door sill (1).	
2	Detach front door sill (1) starting at B-pillar paneling from retaining clips (2) and remove	Only when removing front door sill (1).	
3	Unhook bracket (3.1) from rear door sill (3) at bottom of B-pillar paneling	Only when removing rear door sill (3).	
4	Detach rear door sill (3) from retaining clips (4)	Only when removing rear door sill (3).  Mounting wedge	*110589035900
5	Unclip rear door sill (3) from retaining clip (5)	Only when removing rear door sill (3).  Installation: Replace damaged mounting clip (5).  Clip remover	*452589016300
6	Lift rear bench seat cushion (6) at side	Only when removing rear door sill (3).	
7	Detach rear door sill (3) below rear bench seat cushion (6) from retaining clips (7)	Only when removing rear door sill (3).  Mounting wedge	*110589035900
8	Move rear door sill (3) upward out of guides (8) and remove	Only when removing rear door sill (3).	
9	Install in the reverse order		

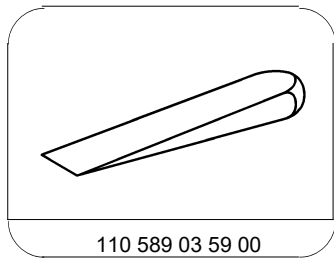

110 589 03 59 00

Mounting wedge

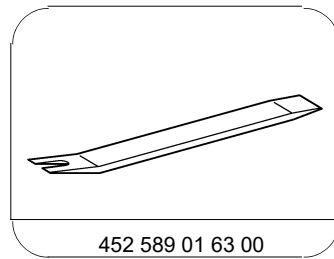

452 589 01 63 00

Clip remover