

**Model** 213, 238 with transmission 725

**Shown on model 238.3**


- 1 Cover
- 2 Stop buffer
- 3 Screw



P68.20-4996-12

**Shown on model 238.4**

- 1 Cover
- 13 Electrical connector
- 14 Screw
- S84 Soft top control switch

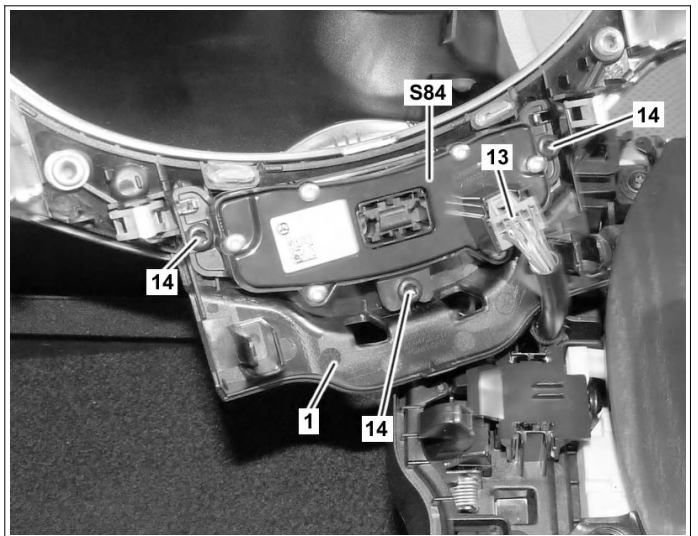

P68.20-5076-11

	Remove/install		
1	Open armrest cover		
2	Remove stop buffer (2)		
3	Remove bolts (3)		
4	Remove cover (1) until electrical connector (13) can be accessed	Model 238.4 with transmission 725	
5	Disconnect electrical connection (13)	Model 238.4 with transmission 725	
6	Take off cover (1)		
7	Unscrew bolts (14) and remove soft top control switch (S84)	Model 238.4 with transmission 725 When replacing cover (1).	
8	Install in the reverse order		