


Model 164, 166, 292

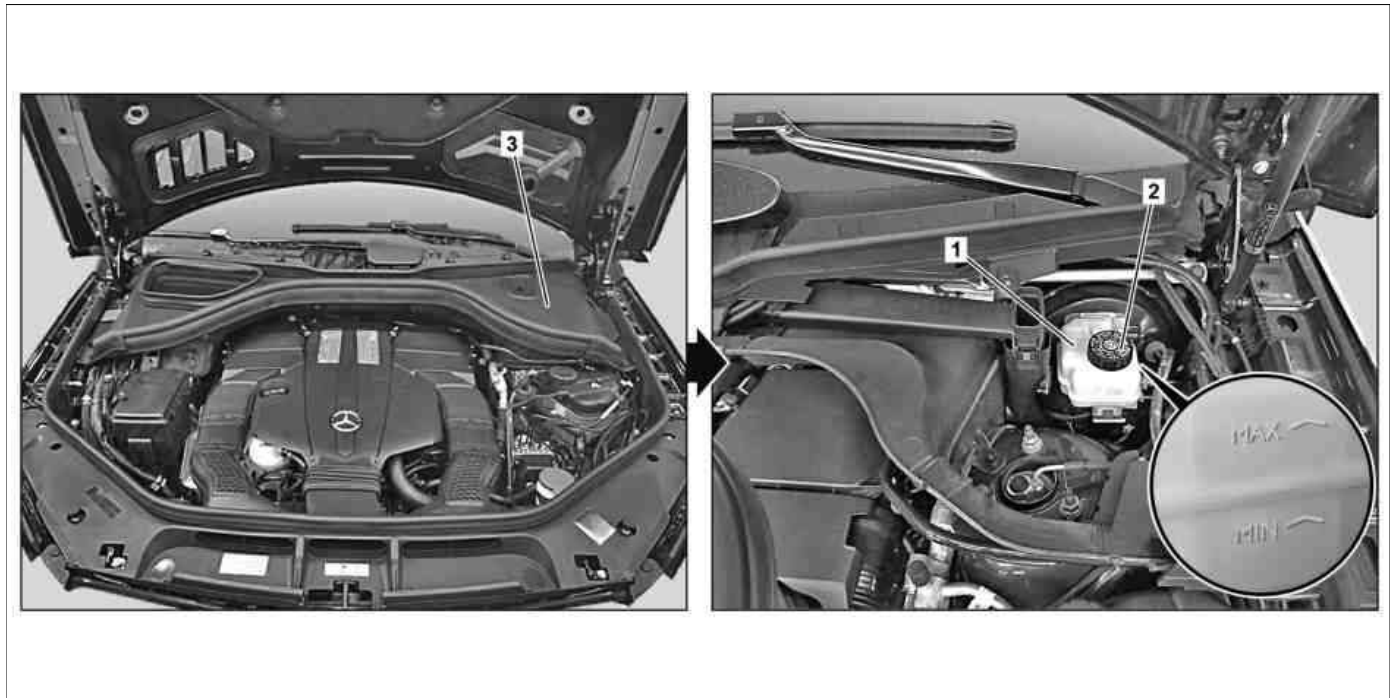

P42.10-3092-09

Shown in model 292

1 Expansion reservoir

3 Cover over left suspension strut tower

Shown in model 164

1 Expansion reservoir



P42.10-2448-01

	Risk of poisoning from swallowing brake fluid. Risk of injury from skin and eye contact with brake fluid	Only pour brake fluid into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
ⓘ	Brake fluid notes		AH42.50-P-0001-01A
ⓘ	Notes on repairs to brake system		AH42.00-P-0003-01A
⏪	Check		
1	Remove cover over left suspension strut tower (3)	Model 166, 292	
2 🔧 BB 🔧 BB	Check fluid level in expansion reservoir (1) General brake fluid Brake fluids (DOT 4 plus)	<p>ⓘ The fluid level must be between the "Min." and "Max." markings on the expansion reservoir (1). If the fluid level is too low:</p> <p style="text-align: center;">↓</p>	BB00.40-P-0330-01A BB00.40-P-0331-00A

		Rectify problem subject to separate repair order. If the fluid level is too high: ↓ Extract brake fluid until the fluid level is at the "Max." mark.	
3	Install cover over left suspension strut tower (3)	Model 166, 292	