


AR80.35-P-4515GH

Removing, installing transponder coil




11.4.97


**MODEL 163**

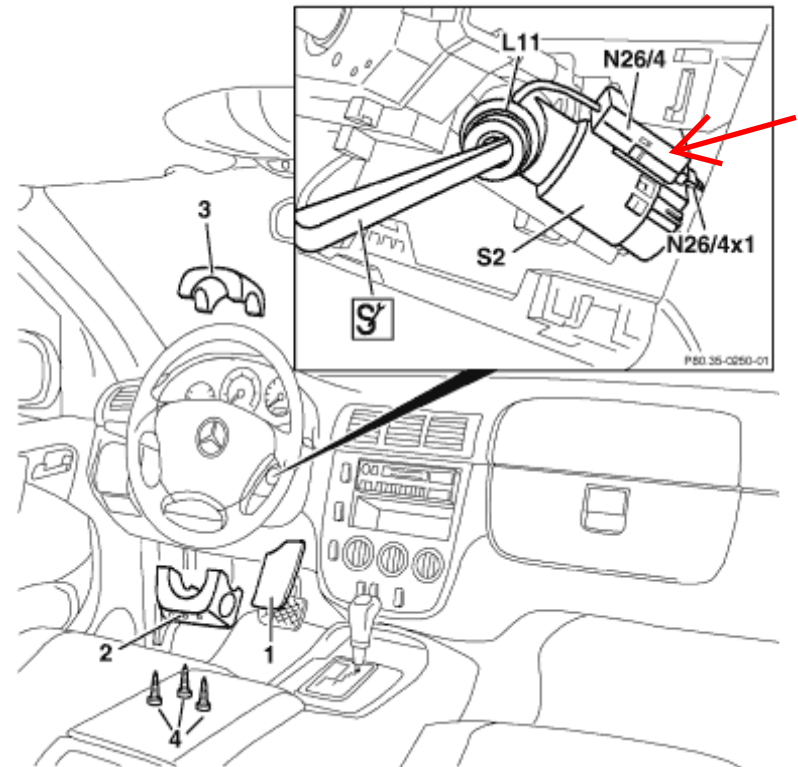- 1 Cover
- 2 Bottom cover shell
- 3 Top cover shell
- 4 Screws
- L11 Transponder coil**
- N26/4 Control module
- N26/4x1 Control module connector
- S2 Starter switch



P80.35-0249-12

 	Removal, installation		
1	Unclip cover (1) on right next to steering column from bottom section of instrument panel		
2	Unscrew screws (4) from steering column lever		
3	Remove cover shells (2, 3) from steering column switch		
4	Slide control module (N26/4) out of guide on starter switch (S2)		
5	Disconnect connector (N26/4x1) from control module (N26/4)		
6	Press transponder coil (L11) off of cover sleeve for starter switch (S2)		<a href="http://www.mercedes-benz.com/115589035900">115 589 03 59 00</a>
7	Remove transponder coil (L11) together with control module (N26/4)		
8	Reinstall in opposite order		

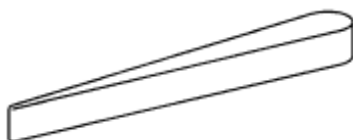

115 589 03 59 00

Long wedge