Model 117, 124.034/036, 129, 140, 156, 163, 164, 166, 168, 169, 170, 171.4, 172, 176, 197, 199, 202, 203, 204, 207, 208,


209, 210, 211, 212, 215, 216, 218, 219, 220, 221, 230, 231, 240, 242, 245, 246, 251, 292, 414

Model 461 Model 463

up to model year 2019

Shown on model 210


- 1 Diagnostic connector
- 2 Diagnostic system

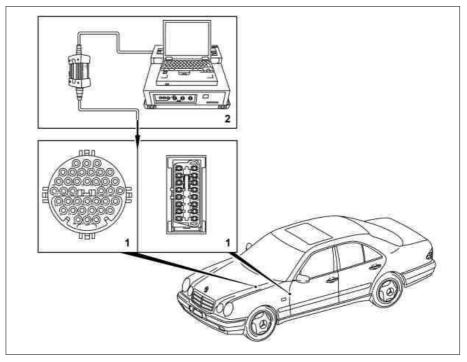

P00.00-5442-06

Shown on model 204

- 1 Diagnostic connector
- 2 Diagnostic system

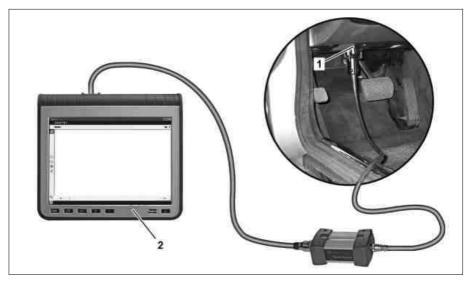

P00.00-5443-05

- Connect diagnostic system (2) to diagnostic connector (1).
- i Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following completion of the operations.

2 Start diagnosis.

4 Disconnect diagnostic system (2).

3 Select the model series in the menu.

Following completion of diagnostic operations.

 $\fbox{\ i}$ The work procedures in the diagnosis program are menu-assisted.