



MODEL 251

- 1 Front door sill molding
- 2 Supports

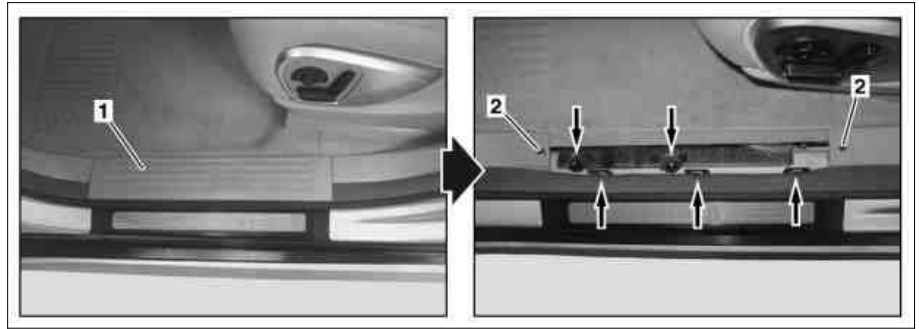

P68.30-3116-04

- 3 Rear door sill molding
- 4 Supports
- 5 Edge guard

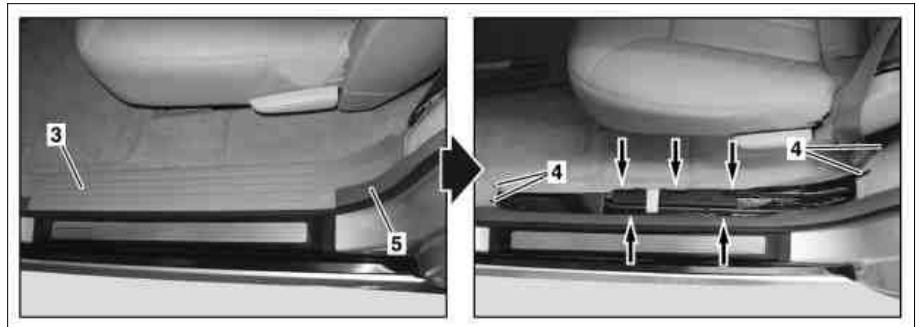

P68.30-3115-04

☒ ☒	Remove/Install		
1	Completely open front and rear door		
2	Unclip front door sill molding (1) and rear door sill molding (3) upward from retaining clips (arrows) by hand and remove.	<p><b>i Installation:</b> Replace damaged retaining clips.</p> <p><b>i Installation:</b> Ensure that guide lugs are seated correctly on front door sill molding (1) or rear door sill molding (3) in mounts (2, 4).</p> <p><b>i Installation:</b> Ensure that the rear section of the rear door sill molding (3) runs below the edge guard (5)</p>	
3	Install in the reverse order		