


MODEL 221.0

MODEL 221.1 except CODE (Z07) Top protection


Shown on model 221.0

- 1 Front door sill molding
- 2 Rear door sill molding
- 3 Clips

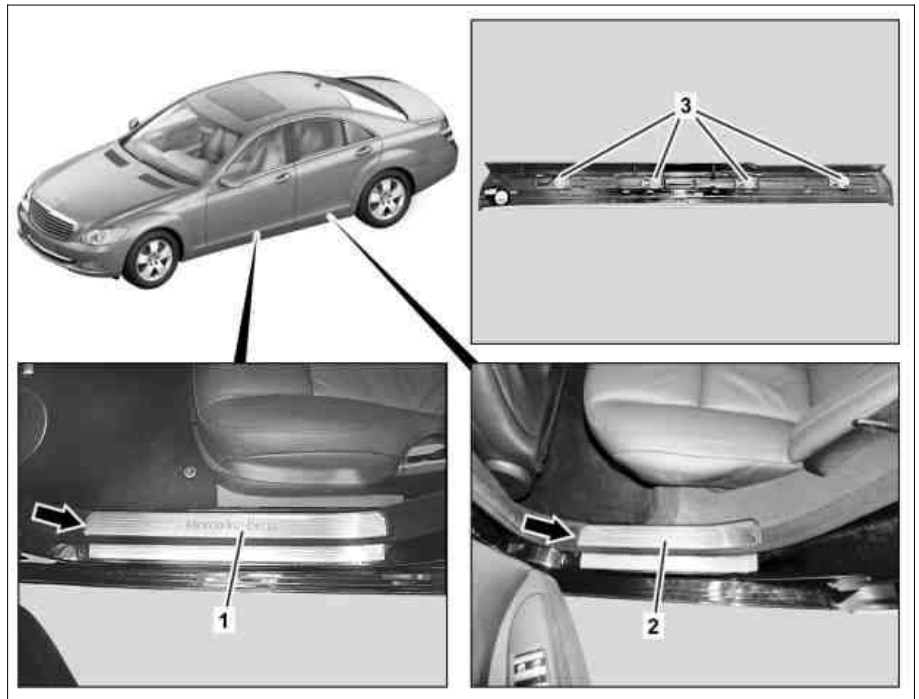

P68.30-3628-06

☒	Remove		
1	Insert long wedge from front (arrow) below front entry molding (1) or rear entry molding (2) next to first clip to be released (3), turn 90° toward inside and unclip clip (3) by pressing long wedge upward	☒	*115589035900
2	Continue to insert long wedge next to all other clips (3) on front entry molding (1) or rear entry molding (2) and unclip clip (3) by pressing long wedge upward	☒	*115589035900
3	Pivot front door sill molding (1) or rear door sill molding (2) upward from rear (arrow) and lift out of retaining clips.		
☒	Install		
4	First insert front door sill molding (1) or rear door sill molding (2) into retaining clips and then clip in toward rear.	i Replace clips (3).	

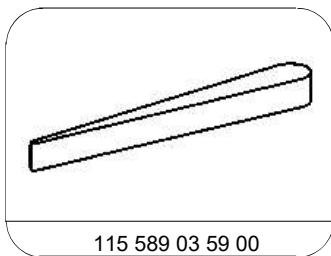

115 589 03 59 00

Long wedge