



Model 223

- 1 Rear center section paneling
- 2 Expansion rivet
- 3 Bracket
- 4 Trunk floor

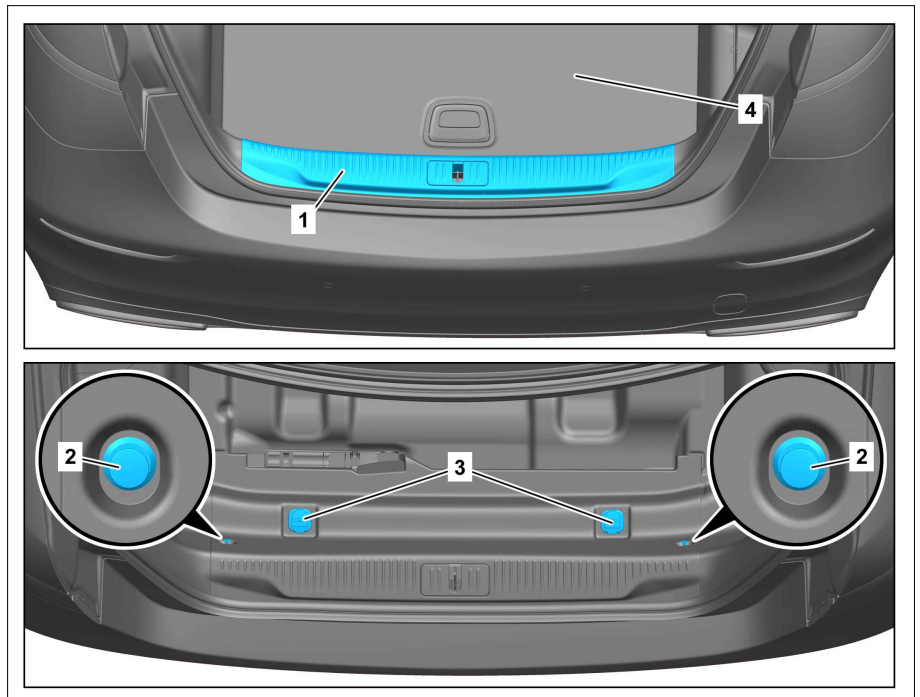


P68.30-A074-76

	Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
		Remove/install		
1		Open trunk lid.		
2		Lift trunk floor (4).		
3		Remove expansion rivets (2).	Dismantling tool	*000589956300
4		Release holders (3) with a suitable tool and unclip with the special tool.	Dismantling tool	*000589956300
5		Unclip rear-end center section cover (1) and remove upward.	Long wedge	*115589035900
6		Install in the reverse order.		

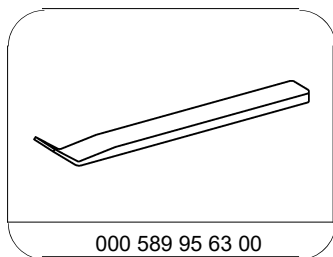

000 589 95 63 00

Dismantling tool

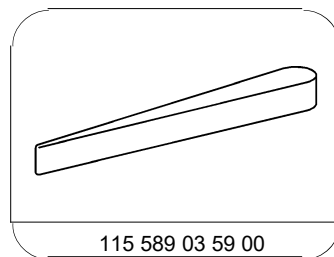

115 589 03 59 00

Long wedge