
MODEL 172.4, 231


Shown on model 174.4

- 1 C-pillar cover
- 2 Trunk lid
- 3 C-pillar upper section
- 4 Assembly wedge
- 5 Catch lug

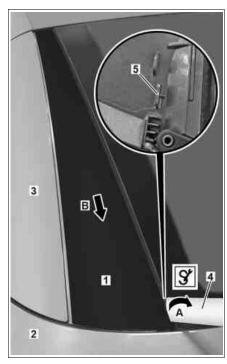

P77.50-2245-03

XX	Remove/install		
1	Open trunk lid (2)		
2	Unclip C-pillar cover (1) at lower corner in direction of arrow (A) using assembly wedge (4)	Removal: Carefully unclip C-pillar cover (1) only at lower corner. Catch lug (5) can break off easily from C-pillar top section (3). Installation: Clip in C-pillar cover (1) with slight pressure. Mounting wedge	*110589035900
3	Manually remove C-pillar cover (1) from C-pillar top section (3) from top to bottom in direction of arrow (B)	i Installation: Check arrest lug (5).	
4	Install in the reverse order		

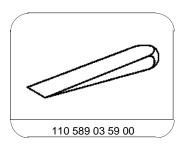

Mounting wedge