

SPECIFICATIONS

Model	2696	807
Torque Range	20-200 in-lb	5-80 ft-lb
Drive	1/4"	3/8"
Length	11"	14-1/4"
Accuracy	±4%	

Model	239	808	3293
Torque Range (ft-lb)	20-150	50-300	100-600
Drive	1/2"	3/4"	3/4"
Length	18"	33-1/2"	42"
Accuracy	±4%		

UNPACKING


When unpacking, make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at 1-800-444-3353 as soon as possible.

OPERATING INSTRUCTIONS




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual before set up or use of this product.

1. Wear ANSI-approved safety goggles and heavy-duty work gloves.
2. Clean and/or repair the threads that will be tightened. Damaged or dirty threads will result in a misleading torque reading.
3. Select the desired socket and verify it fits properly on the nut or bolt being tightened.
4. Press the socket firmly onto the drive anvil.

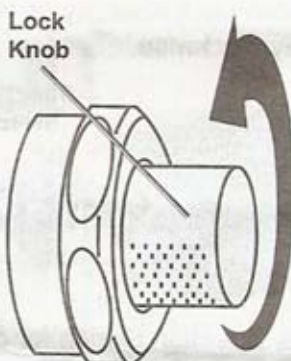


5. Turn the Lock Knob at bottom of the Handle counterclockwise until it stops.
6. Turn the handle to set the torque. To set to 55, for example:

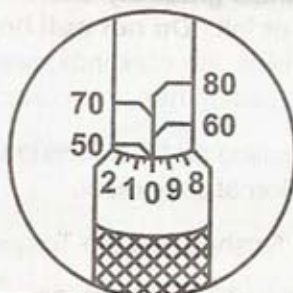

(A)

- a. Turn the knurled handle (CW or CCW) until the "0" graduation on the bevel edge lines up with 50. See illustration (A), above.

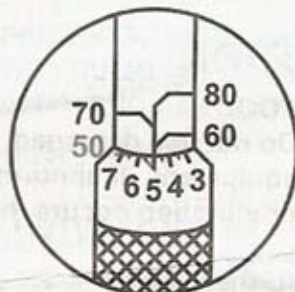

(B)

The 50 line is shown in grey because it will likely be hidden at this point.

- b. Continue turning the knurled handle about a half turn clockwise until the "5" graduation mark lines up with the centerline. It is now set for 55. See illustration (B), above.